



Ref.	Part Description	14070H
<b>UPPER ASSEMBLY</b>		
3	Fulcrum Kit	177420
1	Fulcrum Pin	(100348)
2	Arm Washers (2)	(100163)
4	Arm Spring Assembly	177531
5	Arm Spring	(100349)
<b>NOZZLES (Specify nozzle size when ordering)</b>		
6	Straight Bore	105842
6	Straight Bore W/ Vane	106131
-	Vane	105816
7	Spreader 7 Degree	100225
7	Spreader 20 Degree	100226
7	Brass Plug (W Models)	100255
<b>BEARING ASSEMBLY</b>		
8	Bearing Assy (H Style)	177424
10	Top Seal Washer (Grn)	(103709)
11	Metal Top Seal Washer	(100312)
12	Bearing Spring	(106237)
13	Bearing Sleeve	(103670)
14	Bearing Washer (Black)	(100726)
15	Wear Washer (Orange)	(103058)
16	Seal Washer (Gray)	(102345)
17	Bearing Nipple	(103669)
9	Bearing Washer Assembly	177447
10	Top Seal Washer (Grn)	(103709)
11	Metal Top Seal Washer	(100312)
14	Bearing Washer (Black)	(100726)
15	Wear Washer (Orange)	(103058)
16	Seal Washer (Gray)	(102345)

Note: Part numbers enclosed in brackets ( ) are not available individually, but may be sold in assemblies or kits.