



Ref.	Part Description	25BPJ-FP	
		25BPJ-FP-ADJ	ADJ-DA-TNT
<b>UPPER ASSEMBLY</b>			
1	Fulcrum Kit	177461	177461
2	Fulcrum Pin	(100793)	(100793)
3	PJ Arm Spring Assembly	177507	177507
4	Arm Spring (for PJ)	(104933)	(104933)
5	Adjustment Spring	100136	100136
6	Adjustment Pin	100203	100203
<b>TRIP MECHANISM</b>			
7	Upper Trip	108994	108994
8	Trip Spring	(105720)	(105720)
9	Lower Trip Assembly (FP)	110124	110124
10	Trip Lever	109484	109484
11	Trip Shaft	(104734)	(104734)
<b>NOZZLES (Specify nozzle size when ordering)</b>			
12	Nozzle & Vane Assembly	106160	106160
13	Nozzle	105780	105780
14	Vane	101618	101618
<b>BEARING ASSEMBLY</b>			
15	Bearing Assembly	106181	110950
16	Bearing Spring	-	(100182)
17	Skirted Top Seal (Black)	-	(100180)
18	PTFE Top Seal (White)	-	(100181)
19	Bearing Sleeve	(106183)	(106852)
20	Bearing Washer (Black)	(104181)	(104181)
21	Wear Washer (White)	(104184)	(104696)
22	Bearing Nipple	(104982)	(100178)
23	Friction Collar, STD (A)	104906	104906

(A) STD friction collars 104906 include Quantity 1 per kit.

Note: Part numbers enclosed in brackets ( ) are not available individually, but may be sold in assemblies or kits.