



Ref.	Part Description	25	25FP	25DA	25PJ	25PJ-DA	25BFP-ADJ	25BPJ-FP	25BPJ	25AFP-TNT
		25PJ	25BPJ-FP-ADJ	25BPJ-FP-ADJ-DA	ADJ-DA-TNT	Special	25ASEP-TNT			
UPPER ASSEMBLY										
1	Fulcrum Pin	100793								
-	Arm Hood	-								100775
2	PJ Arm Spring Assembly	115325	115325	115325	115325					
3	Arm Spring (for PJ)	104933	104933	104933	104933					
2	Spoon Arm Spring Assembly (102259)	(102259)	(102259)							115310
3	Arm Spring	100133	100133							109353
-	Alum Arm Bushing	-								112040
-	Reverse Drive Pin	-								108359
4	Adjustment Spring	-	100136	100136	100136					
5	Adjustment Pin	-	100203	100203	100203					
-	Arm Washer	-								100173
TRIP MECHANISM (A)										
6	Upper Trip	108994	108994	108994	108994					108994
7	Trip Spring (B)	105720	105720	105720	105720					105720
8	Lower Trip Assembly (FP)	110124	110124	110124						110124
9	Trip Lever	109484	109484	109484						109484
-	Lower Trip (PC Only)	110496			110496					
10	Trip Shaft (For new models)	(104734)	(104734)	(104734)	(104734)					(104734)
-	Trip Pin Kit (For older models)	107075	107075	107075	107075					107075
NOZZLES (Specify nozzle size when ordering)										
11	Nozzle & Vane Assembly	-	106160	106160	106160					
12	Nozzle	-	105780	105780	105780					105780
13	Vane	-	101618	101618	101618					
-	ADJ Nozzle Assembly	101092								
-	Spring	100136								
-	Adjustment Pin	100203								
-	Vane	101618								
-	DA Nozzle Assembly	101093								
-	Vane	101618								
-	Off Axis 7 Degree									100225
-	Off Axis 12 Degree									100622
-	Off Axis 23 Degree									100227
BEARING ASSEMBLY										
14	Bearing Assembly	106181	106181	110950	(103152)					101692
15	Bearing Spring	-		100182	100182					100182
16	Skirted Top Seal (Black)	-		100180	100180					100180
17	PTFE Top Seal (White)	-		100181	100181					100181
18	Bearing Sleeve	(104983)	(104983)	(106852)	(109214)					(106852)
19	Bearing Washer (Black)	-		104181	104181					104181
20	Wear Washer (White)	-		104696	104696					104696
19	Brg Washer (Fiber/Black)	100132	100132	(BK)104181	(BK)104181					(BK)104181
21	Bearing Nipple	(104982)	(104982)	100178	100178					100178
-	Friction Collars, STD (2) (C)	104906	104906	104906						104906
22	Friction Collars, Locking (2)	101137			101137					

(A) On older 25 models with brass trips both upper and lower trips must be replaced together.
 (B) On older 25 models with sand cast brass trips use trip spring # 207750.
 (C) STD friction collars are included in bearing assembly #106181.

Note: Part numbers enclosed in brackets () are not available individually, but may be sold in assemblies or kits.