



Note: Part numbers enclosed in brackets () are not available individually, but may be sold in assemblies or kits.

Ref.	Part Description	30H 30WH	30PW	30FH 30FW
UPPER ASSEMBLY				
1	Fulcrum Kit	177417	177417	177417
2	Fulcrum Pin	(100271)	(100271)	(100271)
3	Arm Hood	(100968)	(100968)	(100968)
6	Arm Washer	(100270)	(100270)	(100270)
4	Arm/Spring Assembly	177529	177530	177529
5	Arm Spring	(231061)	(100358)	(231061)
NOZZLES (Specify nozzle size when ordering)				
7	Drive Nozzles			
-	Straight Bore	105842	105842	105842
-	Straight Bore w/Vane (E Models)	106131	106131	-
-	Keyhole	106353	106353	106353
-	Spreader Nozzles			
8	Spreader 7 Degree	100225	-	-
8	Spreader 20 Degree	100226	-	-
9	Spreader Plug (W Models)	100255	-	-
	Vane (E Models Not Pictured)	105816	105816	-
BEARING ASSEMBLY				
11	Bearing Assembly	177424	177425	177425
12	Top Seal Washer (W=Wht/G=Grn) G (103709)		W (100313)	W (100313)
13	Metal Top Seal Washer	(100312)	(100312)	(100312)
14	Bearing Spring	(106237)	(106237)	(106237)
15	Bearing Sleeve	(103670)	(103670)	(103670)
16	Bearing Washer (Black	(100726)	(100726)	(100726)
17	Wear Washer (O=Orange/W=Wht)O (103058)		W (104762)	W (104762)
18	Seal Washer (G=Gray / B=Blk) G (102345)		B (100726)	B (100726)
19	Bearing Nipple	(103669)	(103669)	(103669)
10	Bearing Washer Assembly	177447	177448	177448
12	Top Seal Washer (W=Wht/G=Grn) G (103709)		W (100313)	W (100313)
13	Metal Top Seal Washer	(100312)	(100312)	(100312)
16	Bearing Washer (Black	(100726)	(100726)	(100726)
17	Wear Washer (O=Orange/W=Wht)O (103058)		W (104762)	W (104762)
18	Seal Washer (G=Gray / B=Blk) G (102345)		B (100726)	B (100726)

Note: Part numbers enclosed in brackets () are not available individually, but may be sold in assemblies or kits.