



Note: Part numbers enclosed in brackets () are not available individually, but may be sold in assemblies or kits.

35 SERIES / 35A SERIES

Ref.	Part Description	35-STD	35-ADJ-STD	35-PJDA-STD	35-PJADJ-STD	35A-PJ-TNT <i>Special</i>
		35-TNT	35-ADJ-TNT	35-PJDA-TNT	35-PJADJ-TNT	
		35A-TNT	35A-ADJ-TNT	35A-PJDA-TNT	35A-PJADJ-TNT	
UPPER ASSEMBLY						
1	Fulcrum Pin	101157	101157	101157	101157	101157
2	Arm Spring Assy, PJ	—	—	102568	102568	102568
3	Arm Spring	—	—	100305	100305	100305
—	Arm Spring Assy, STD	102567	102567	—	—	—
3	Arm Spring	100305	100305	—	—	—
NOZZLES (Specify nozzle size when ordering.)						
4	Standard Range Nozzle	105842	—	—	—	—
4	Keyhole Nozzle	106353	—	—	—	—
5	ADJ Nozzle Assembly	—	100328	—	100328	100328
6	Spring	—	100136	—	100136	100136
7	Pin—	100203	—	100203	100203	—
8	DA Nozzle	—	—	100332	—	—
TRIP MECHANISM						
9	Upper & Lower Trip Kit	114653	114653	114653	114653	114653
—	Trip Assembly, Upper	(113869)	(113869)	(113869)	(113869)	(113869)
10	Upper Trip	(110192)	(110192)	(110192)	(110192)	(110192)
11	Trip Spring	100158	100158	100158	100158	100158
12	Trip Assembly, Lower	114318	114318	114318	114318	114318
13	E-Ring	100149	100149	100149	100149	100149
14	Spacer Washers (2)	100164	100164	100164	100164	100164
15	Trip Shaft	100320	100320	100320	100320	100320
BEARING ASSEMBLY						
16	Bearing Assembly (New TNT Style)	110581	110581	110581	110581	(109779)
17	Bearing Spring	109539	109539	109539	109539	109539
18	Skirted Top Seal Washer (Black)	100297	100297	100297	100297	100297
19	Top Seal Washer (PTFE) (White)	100298	100298	100298	100298	100298
20	Bearing Sleeve	109727	109727	109727	109727	109727
21	Bearing Washer (Black)	100726	100726	100726	100726	100726
22	Wear Washer (Orange)	103058	103058	103058	103058	103058
23	Bearing Washer, Seal (Gray)	102345	102345	102345	102345	102345
24	Bearing Nipple	100302	100302	100302	100302	100302
—	Friction Collars, Standard (2)	105773	105773	105773	105773	—
25	Friction Collars, Locking	—	—	—	—	101085
16	Bearing Assembly (Old TNT Style)	(A) (100100)	(A) (100100)	(A) (100100)	(A) (100100)	(A) (100100)
17	Bearing Spring	100272	100272	100272	100272	100272
18	Skirted Top Seal Washer (Black)	100297	100297	100297	100297	100297
19	Top Seal Washer (PTFE) (White)	100298	100298	100298	100298	100298
20	Bearing Sleeve Assy	(A) (106289)	(A) (106289)	(A) (106289)	(A) (106289)	(A) (106289)
21	Teflon Wearing Ring (Orange)	102076	102076	102076	102076	102076
22	Bearing Washer (Black)	(100726)	(100726)	(100726)	(100726)	(100726)
24	Bearing Nipple	100302	100302	100302	100302	100302
—	Friction Collars, Standard (2)	105773	105773	105773	105773	—
25	Friction Collars, Locking (2)	—	—	—	—	101085
—	Bearing Assembly (STD Style)	(A) (100099)	(A) (100099)	(A) (100099)	(A) (100099)	—
—	Sleeve	(A) (100324)	(A) (100324)	(A) (100324)	(A) (100324)	—
—	Washer (Fiber)	(A) (100156)	(A) (100156)	(A) (100156)	(A) (100156)	—
—	Nipple	(A) (100295)	(A) (100295)	(A) (100295)	(A) (100295)	—

(A) No longer available, use bearing assembly # 110581.

Note: Part numbers enclosed in brackets () are not available individually, but may be sold in assemblies or kits.