



Ref.	Part Description	40FC H	40FC TNT
<b>UPPER ASSEMBLY</b>			
1	Protective Cover	(102632)	(102632)
2	Fulcrum Pin	(106489)	(106489)
3	Spring Guide	(103154)	(103154)
4	Arm Washer (2)	100163	100163
5	Arm Spring Assembly	(102809)	(102809)
6	Arm Spring	100349	100349
<b>NOZZLES (Specify nozzle size when ordering)</b>			
7	Straight Bore w/Vane	106131	106131
-	Straight Bore	105842	105842
-	Vane	105816	105816
<b>BEARING ASSEMBLY</b>			
-	Bearing Conversion Kit	-	110048
8	Bearing Adaptor	-	110030
9	Bearing Assembly (H Style)	104152	104152
10	Top Seal Washer (Green)	103709	103709
11	Metal Top Seal Washer	100312	100312
12	Bearing Spring	106237	106237
13	Bearing Sleeve	103670	103670
14	Bearing Washer (Black)	100726	100726
15	Wear Washer (Orange)	103058	103058
16	Seal Washer (Gray)	102345	102345
17	Bearing Nipple	103669	103669
<b>BEARING ASSEMBLY (Old TNT Style)</b>			
18	Bearing Assembly (Old TNT Style)	-	100272
19	Bearing Spring	-	100272
20	Skirted Top Seal Washer (Black)	-	100297
21	Top Seal Washer (White)	-	100298
22	Bearing Sleeve	-	(A)
23	Wear Washer (T-Ring) (Orange)	-	102076
24	Bearing Washer (Black)	-	100726
25	Seal Washer (Gray)	-	102345
26	Bearing Nipple	-	100302
<b>BEARING ASSEMBLY (Old STANDARD Style)</b>			
-	Bearing Assembly (Old STANDARD Style)	-	100272
19	Bearing Spring	-	100272
22	Bearing Sleeve	-	(A)(100294)
25	Bearing Washer (Fiber)	-	100156
26	Bearing Nipple	-	(A)(100295)

(A) Not available. Use Bearing Conversion Kit #110048.

Note: Part numbers enclosed in brackets ( ) are not available individually, but may be sold in assemblies or kits.