



Ref.	Part Description	46H	46AH
		46H Plus	46AWH
<b>UPPER ASSEMBLY</b>			
1	Fulcrum Pin	101157	101157
2	Arm Spring	100305	100305
3	Arm Hood	100968	100968
4	Arm	(100353)	(102560)
5	Arm Washer	100270	100270
6	Body	105871	105871
<b>NOZZLES (Specify nozzle size when ordering)</b>			
7	Drive Nozzles		
-	Straight Bore w/Vane	106131	106131
-	RainFlow	111089	111089
7A	Plastic Straight Bore w/Vane	71-P00002	71-P00002
8	Spreader Nozzles		
-	Spreader 7 Degree	100225	100225
-	Spreader 20 Degree	100226	100226
-	Spreader Plug (W Models)	100255	100255
-	Plastic Spreader Nozzles	71-P50412	71-P50412
-	Plastic Plug	71-P00001	71-P00001
<b>BEARING ASSEMBLY</b>			
9	Bearing Assembly	105833-01	105833-01
10	Top Seal Washer (White)	100313	100313
11	Metal Top Seal Washer	100312	100312
12	Bearing Spring	106237	106237
13	Bearing Sleeve	105832	105832
14	Bearing Washer (Black)	100726	100726
15	Wear Washer (White)	104762	104762
16	Bearing Seal Washer (Black)	100726	100726
17	Bearing Nipple	105831	105831

Note: Part numbers enclosed in brackets ( ) are not available individually, but may be sold in assemblies or kits.