



Ref.	Part Description	65PJ-TNT	65PJADJ-TNT
UPPER ASSEMBLY			
1	Fulcrum Pin	177420	
2	Arm Spring Assembly PJ	(A) 102570	
3	Arm Spring	(100369)	
NOZZLES (Specify nozzle size when ordering)			
4	ADJ Nozzle Assembly	100385	
5	Pin	(100203)	
6	Spring	(100136)	
7	Range Nozzle	100382	
TRIP MECHANISM			
8	Trip Assembly, Upper	100370	
9	Upper Trip	(100371)	
10	Trip Spring	(100372)	
11	Trip Assembly, Lower	100373	
12	Spacer Washer (2)	(100376)	
13	E-Ring	(100377)	
14	Trip Shaft	100365	
BEARING ASSEMBLY			
15	Bearing Washer Assembly	177475	
16	Bearing Spring	(231064)	
17	Metal Top Seal Washer	(231063)	
18	Top Seal Washer (White)	(100313)	
19	Friction (Trip) Collar	(B) 105774	
20	Bearing Sleeve (FNPT)	177500	
20	Bearing Sleeve (BSP)	177499	
21	Bearing Washer (2) (Black)	(104038)	
22	Wear Washer (Orange)	(104037)	
23	Bearing Nipple	177518	

(A) 65D arm is no longer available, use current PJ arm.
 (B) Friction Trip Collars available individually or with sleeve.
 Kit 105774 includes Quantity of 1

Note: Part numbers enclosed in brackets () are not available individually, but may be sold in assemblies or kits.