



Ref.	Part Description	85EHD	85EHD-BSP
UPPER ASSEMBLY			
1	Fulcrum Pin	177421	177421
2	Arm Hood	(108556)	(108556)
3	Arm Washer (2)	(100432)	(100432)
4	Arm Spring Assembly	177470	177470
5	Arm Spring	(100431)	(100431)
TRIP MECHANISM			
6	Trip Assembly, Upper	111130	111130
7	Trip Spring	(112858)	(112858)
8	Trip Assembly, Lower	111129	111129
9	Trip Hood (2)	111812	111812
10	E-Ring	(100377)	(100377)
11	Trip Shaft	(108321)	(108321)
NOZZLES (Specify nozzle size when ordering)			
12	Range Nozzle	103043	103043
13	Body Vane	101275	101275
12	Low Pressure Nozzle	108149	108149
14	20 Deg. Spreader Nozzle	100226-14	—
—	Nozzle Plug	100255	—
15	Bearing Washer Assembly	177474	177474
16	Seal Washer, Upper	(104638)	(104638)
17	Bearing Hood	(113098)	(113098)
18	Bearing Spring	(100449)	(100449)
19	Wear Washer, Top (Black)	(113309)	(113309)
20	Bearing Sleeve	177515	177467
21	Bearing Washer (Black)	(113099)	(113099)
22	Wear Washer (Orange)	(104639)	(104639)
23	Bearing Washer, Seal	(113100)	(113100)
24	Bearing Nipple	177506	177506
25	Friction Collars (Top)	107959-01	107959-01
26	Screw	(111126)	(111126)
27	Friction Collars (Bottom)	107960-01	107960-01
26	Screw	(111126)	(111126)

Note: Part numbers enclosed in brackets () are not available individually, but may be sold in assemblies or kits.