



Ref.	Part Description	L20H
<b>UPPER ASSEMBLY</b>		
3	Fulcrum Kit	177415
1	Fulcrum Pin	(100793)
2	Arm Hood	(100775)
6	Arm Washer	(100173)
4	Arm Spring	(100172)
5	Arm Spring Assembly	177522
<b>NOZZLES (Specify nozzle size when ordering)</b>		
16	Straight Bore	105780xx
<b>BEARING ASSEMBLY</b>		
7	Bearing Assembly	177422
8	Top Seal Washer (White)	(100279)
9	Metal Top Seal Washer	(100280)
10	Bearing Spring	(105431)
11	Bearing Sleeve (Brass)	(104153)
12	Bearing Washer (2) (Black)	(104181)
13	Wear Washer (White)	(104696)
14	Bearing Nipple	(102020)
15	Bearing Washer Assembly	177445
8	Top Seal Washer (White)	(100279)
9	Metal Top Seal Washer	(100280)
12	Bearing Washer (2) (Black)	(104181)
13	Wear Washer (White)	(104696)

Note: Part numbers enclosed in brackets ( ) are not available individually, but may be sold in assemblies or kits.