



<b>Ref. Part Description</b>	<b>L20VH</b>	<b>M20VH-PM</b>
<b>UPPER ASSEMBLY</b>		
3 Fulcrum Kit	177415	177415
1 Fulcrum Pin	(100793)	(100793)
2 Arm Hood	(100775)	(100775)
7 Arm Spring Assembly	177523	177523
5 Arm Spring	(100172)	(100172)
4 Wedge	(111188)	(111188)
6 Wedge Pin	(100331)	(100331)
<b>NOZZLES (Specify nozzle size when ordering)</b>		
8 Straight Bore	105780xx	105780xx
<b>BEARING ASSEMBLY</b>		
16 Bearing Assembly (Complete)	177535	177423
9 Top Seal Washer (Black)	(104183)	(104183)
10 Metal Top Seal Washer	(100280)	(100280)
11 Bearing Spring	(105431)	(105431)
12 Bearing Sleeve (Brass)	(104153)	-
12 Bearing Sleeve (Plastic)	-	(104631)
13 Bearing Washer (2) (Black)	(104181)	(104181)
14 Wear Washer (White)	(104696)	(104696)
15 Bearing Nipple	(102020)	(102020)
17 Bearing Washer Assembly	177536	177536
9 Top Seal Washer (Black)	(104183)	(104183)
10 Metal Top Seal Washer	(100280)	(100280)
13 Bearing Washer (2) (Black)	(104181)	(104181)
14 Wear Washer (White)	(104696)	(104696)

Note: Part numbers enclosed in brackets ( ) are not available individually, but may be sold in assemblies or kits.