



Ref.	Part Description	L36H	L36AH
UPPER ASSEMBLY			
1	Body Cap	NA	NA
2	Arm Spring Assy	(115059-01)	177449
3	Arm	(115063)	(112236)
4	Arm Spring	(114472)	(114472)
5	Arm Washer	(100270)	(100270)
6	Fulcrum Pin	(110726)	(110726)
7	Body	NA	NA
NOZZLES (Specify nozzle size when ordering)			
8	Straight Bore, Quick Fit	107881	107881
8	Low Pressure, Quick Fit	109247	109247
BEARING ASSEMBLY			
9	Bearing Assembly	177424	177450
10	Top Seal Washer	(Gr) (103709) (W) (100313)	
11	Metal Top Seal Washer	(100312)	(100312)
12	Bearing Spring	(106237)	(106237)
13	Bearing Sleeve	(103670)	(103670)
14	Bearing Washer	(B) (100726) (B) (100726)	
15	Wear Washer	(O) (103058) (O) (104762)	
16	Seal or Brg Washer	(G) (102345) (B) (100726)	
17	Bearing Nipple	(103669)	(103669)

Bearing washer color code: W = White, Gr = Dark Green, B = Black, O = Orange, G = Grey
 * NOTE: Old style L36 has a plastic bearing nipple, while new style L36 has a brass bearing nipple.

Note: Part numbers enclosed in brackets () are not available individually, but may be sold in assemblies or kits.