

English



ESP-RZ/RZX

Quick Reference Manual




Auto Auto is the normal operating mode

- Press the **AUTO** key to return to normal operation. During watering, the display shows a blinking sprinkler symbol, the active **ZONE** number and watering **RUN TIME** remaining for that zone.




Date/Time Set current date and time

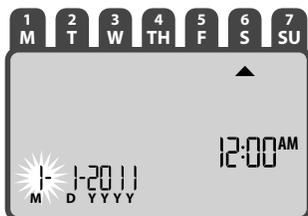

- Press the **DATE/TIME** key.
- Press **+ or -** to adjust the current selection.
- Press **NEXT (or BACK)** to select the value you wish to change.



Zone Schedule Create irrigation schedules

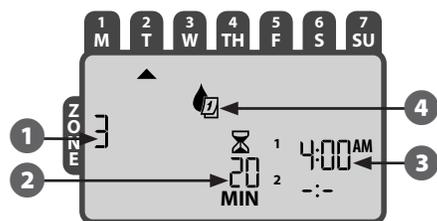

- Press the zone **SCHEDULE** key, then follow steps 1 through 4.
- 1 Select Zone:**
 - Press **+ or -** to select desired **ZONE** number; then press **NEXT**.
- 2 Set Watering Run Time:**
 - Press **+ or -** to set desired **RUN TIME**; then press **NEXT**.
- 3 Set Watering Start Times:**
 - Press **+ or -** to set first **START TIME**; then press **NEXT**.



REPEAT as desired to set additional **START TIMES** for that zone.



NOTE: Pressing **NEXT** with **---** (OFF) is blinking on the display will advance to Step 4.



NOTE: Watering **START TIMES** automatically stack.

4 Set Watering Start Days:

Press + or - to select one of four available options:

- **Custom Days** - To schedule watering to occur on selected days of the week, **go to 4a**.
- **Odd Days** - To schedule watering to occur on all odd calendar days (1,3,5...29 etc.), **go to 4b**.
- **Even Days** - To schedule watering to occur on all even calendar days (2,4,6...30 etc.), **go to 4c**.
- **Cyclic Days** - To schedule watering to occur at intervals (every 2 days, or 3 days, etc.), **go to 4d**.

4a Custom Days

- Press **+ or -** to select then press **NEXT**.
- Press **ON** (to enable) or **OFF** (to disable) the blinking **SELECTION DAY**. Cursor will then advance to the next **SELECTION DAY**.

REPEAT for each day of the week as desired.

4b Odd Days

- Press **+ or -** to select 1,3,5...29 then press **NEXT**.

4c Even Days

- Press **+ or -** to select 2,4,6...30 then press **NEXT**.

4d Cyclic Days

- Press **+ or -** to select then press **NEXT**.
- Press **+ or -** to set desired **DAY CYCLE**; then press **NEXT**.
- Press **+ or -** to set desired **START DATE**; then press **NEXT**.

THEN



REPEAT steps 1-4 for additional zones as desired.

When programming is completed, press the AUTO key to resume normal operations.



Manual Watering Start watering immediately



- Press the **MANUAL** watering key.

- Press **+ or -** to select **ALL** zones or any **SINGLE** zone; then press **NEXT**.
- Press **+ or -** to set desired **RUN TIME**; then press **NEXT** to begin watering.



NOTE: Only stations with programmed **RUN TIMES** and **START TIMES** will water manually.




NOTE: To stop manual watering, press the **OFF** key to stop irrigation and then press the **AUTO** key to return to normal operation.



NOTE: If **ALL** zones are watering, pressing **NEXT** will advance watering to next zone.



Seasonal Adjust Increase or Decrease Watering Duration for ALL zones

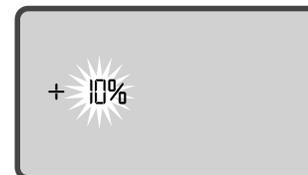

- Press the **SEASONAL ADJUST** key.
- Press **+ or -** to increase or decrease the percentage **SETTING**.



OFF Stops all irrigation

- Press the **OFF** key to immediately cancel all active watering. No automatic irrigation will occur when the system is in OFF. Programmed irrigation schedules still remain stored in memory even when the controller is turned off or if power is lost.



NOTE: Press the **AUTO** key to resume normal operation. Automatic irrigation will NOT occur if the controller remains in OFF mode.



NOTE: Install two AAA batteries to retain date and time in the event of a power outage.



www.rainbird.com/ESP-RZX



NOTE: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.



WARNING: If the supply cord of an outdoor controller is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

If the supply cord of an indoor controller is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.