

A Weather Reach Signal Provider (WRSP) broadcasts a wireless weather signal used by ET Managers to automatically control the frequency of watering. The information on this sheet, provided by the WRSP, contains essential settings that need to be programmed in the ET Manager for proper operation:

Signal Provider Code - The code consists of 10 numbers labeled A through J. The code is unique to each WRSP.

Weather Region - The Weather Region number represents a weather station managed by the Weather Reach Signal Provider. Choose a weather region that corresponds to the weather station closest to the location of the ET Manager.

Elevation - The ET Manager uses elevation to calculate ET. The weather station elevation is provided as a reference. ET Manager location elevation must be programmed to calculate ET.

Historical ET - The ET Manager uses average daily ET for each month only as a back up to real-time ET. The Average Daily Historical ET values are provided as a reference.

Weather Reach Signal Provider Information
WaterLogic

Contact: Weather Reach Administrator
Email: wradmin@waterlogic-texas.com
Website: <http://www.waterlogic-texas.com>
Phone: 713-983-9555
Toll Free: 877-322-4222
Address: 510 Bering, Suite 300
Houston, TX 77057

Signal Provider Code		
A: 64	D: 95	G: 7
B: 255	E: 11	H: 10
C: 89	F: 215	I: 153
		J: 159

WaterLogic offers Weather Reach Signal Service on an annual subscription. After installing the ET Manager and programming the WaterLogic Signal Provider code, complete the Weather Signal test described in the Installation Guide. The Attention light will be on and the Attention Message on the display will read, "No Signal Service." Contact WaterLogic and provide them the ET Manager serial number and billing information. They will send a wireless command to activate the ET Manager. Once WaterLogic activates the ET Manager, the "No Signal Service" Attention message will disappear.

Weather Regions

Weather Region 1 – West Houston

Location: Beltway 8 and Interstate 10
City: Houston, Texas
Elevation: 80 Feet

Average Daily Historical ET		
Jan: 0.06"	May: 0.16"	Sep: 0.15"
Feb: 0.09"	Jun: 0.19"	Oct: 0.11"
Mar: 0.11"	Jul: 0.19"	Nov: 0.08"
Apr: 0.14"	Aug: 0.17"	Dec: 0.06"

Weather Region 2 – Central Houston

Location: Loop 610 & Memorial Dr.
City: Houston, Texas
Elevation: 60 Feet

Average Daily Historical ET		
Jan: 0.06"	May: 0.16"	Sep: 0.15"
Feb: 0.09"	Jun: 0.19"	Oct: 0.11"
Mar: 0.11"	Jul: 0.19"	Nov: 0.08"
Apr: 0.14"	Aug: 0.17"	Dec: 0.06"

Weather Region 3 – League City

Location: Magnolia Creek
City: Houston, Texas
Elevation: 23 Feet

Average Daily Historical ET		
Jan: 0.06"	May: 0.16"	Sep: 0.15"
Feb: 0.09"	Jun: 0.19"	Oct: 0.11"
Mar: 0.11"	Jul: 0.19"	Nov: 0.08"
Apr: 0.14"	Aug: 0.17"	Dec: 0.06"

Weather Region 4 – Sugar Land

Location: US 59 & Hwy 90
City: Houston, Texas
Elevation: 75 Feet

Average Daily Historical ET

Jan: 0.06"	May: 0.16"	Sep: 0.15"
Feb: 0.09"	Jun: 0.19"	Oct: 0.11"
Mar: 0.11"	Jul: 0.19"	Nov: 0.08"
Apr: 0.14"	Aug: 0.17"	Dec: 0.06"

Weather Region 12 – Frisco

Location: Frisco
City: Frisco, Texas
Elevation: 583 Feet

Average Daily Historical ET

Jan: 0.06"	May: 0.17"	Sep: 0.16"
Feb: 0.08"	Jun: 0.21"	Oct: 0.12"
Mar: 0.12"	Jul: 0.24"	Nov: 0.09"
Apr: 0.15"	Aug: 0.22"	Dec: 0.06"

Rain Region 1 – Frisco Southwest

Location: Timber Ridge
City: Frisco, Texas

Rain Region 3 – Frisco Northeast

Location: El Dorado
City: Frisco, Texas

Rain Region 4 – Frisco Southeast

Location: Hillcrest
City: Frisco, Texas

Weather Region 14 – Corpus Christi

Location: Corpus Christi
City: Corpus Christi, Texas
Elevation: 10 Feet

Average Daily Historical ET

Jan: 0.08"	May: 0.19"	Sep: 0.17"
Feb: 0.11"	Jun: 0.21"	Oct: 0.14"
Mar: 0.14"	Jul: 0.22"	Nov: 0.10"
Apr: 0.17"	Aug: 0.21"	Dec: 0.08"

Weather Region 16 – Denton

Location: Robson Ranch
City: Denton, Texas
Elevation: 720 Feet

Average Daily Historical ET

Jan: 0.06"	May: 0.17"	Sep: 0.16"
Feb: 0.08"	Jun: 0.21"	Oct: 0.12"
Mar: 0.12"	Jul: 0.24"	Nov: 0.09"
Apr: 0.15"	Aug: 0.22"	Dec: 0.06"

Weather Region 17 – McKinney

Location: I-75 and Hwy 121
City: McKinney, Texas
Elevation: 680 Feet

Average Daily Historical ET

Jan: 0.06"	May: 0.17"	Sep: 0.16"
Feb: 0.08"	Jun: 0.21"	Oct: 0.12"
Mar: 0.12"	Jul: 0.24"	Nov: 0.09"
Apr: 0.15"	Aug: 0.22"	Dec: 0.06"

Weather Region 18 – San Antonio

Location: Loop 410 and Hwy 281
City: San Antonio, Texas
Elevation: 740 Feet

Average Daily Historical ET

Jan: 0.08"	May: 0.19"	Sep: 0.17"
Feb: 0.10"	Jun: 0.22"	Oct: 0.13"
Mar: 0.15"	Jul: 0.23"	Nov: 0.09"
Apr: 0.18"	Aug: 0.22"	Dec: 0.08"

Weather Region 19 – Ft. Worth

Location: I-20 and I-35w
City: Ft. Worth, Texas
Elevation: 700 Feet

Average Daily Historical ET

 
Jan: 0.06"	May: 0.17"	Sep: 0.16"
Feb: 0.08"	Jun: 0.21"	Oct: 0.12"
Mar: 0.12"	Jul: 0.24"	Nov: 0.09"
Apr: 0.15"	Aug: 0.22"	Dec: 0.06"

Weather Region 20 – Dallas


Location: Hidden Ridge / Verizon Building
City: Irving, Texas
Elevation: 460 Feet

Average Daily Historical ET

Jan: 0.06"	May: 0.17"	Sep: 0.16"
Feb: 0.08"	Jun: 0.21"	Oct: 0.12"
Mar: 0.12"	Jul: 0.24"	Nov: 0.09"
Apr: 0.15"	Aug: 0.22"	Dec: 0.06"

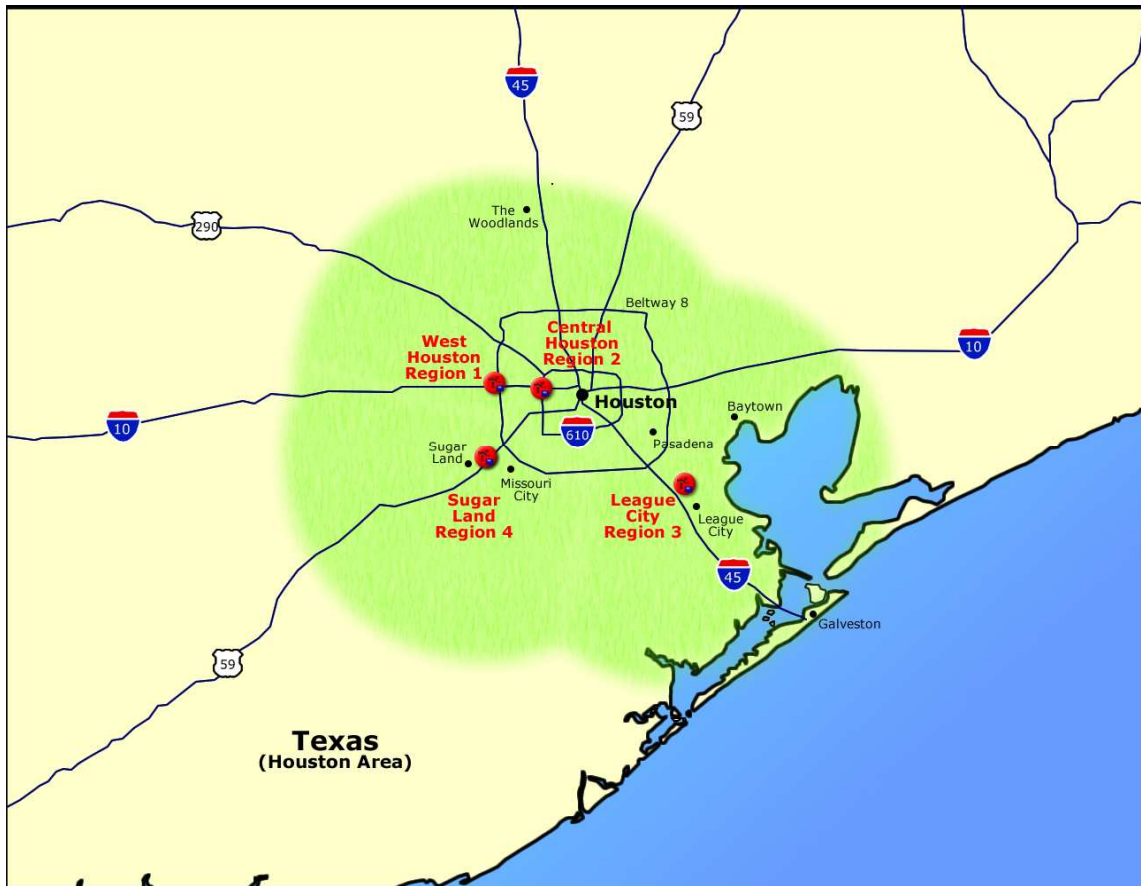

 
Because of the nature of radio transmission, strength of signal varies depending upon location.

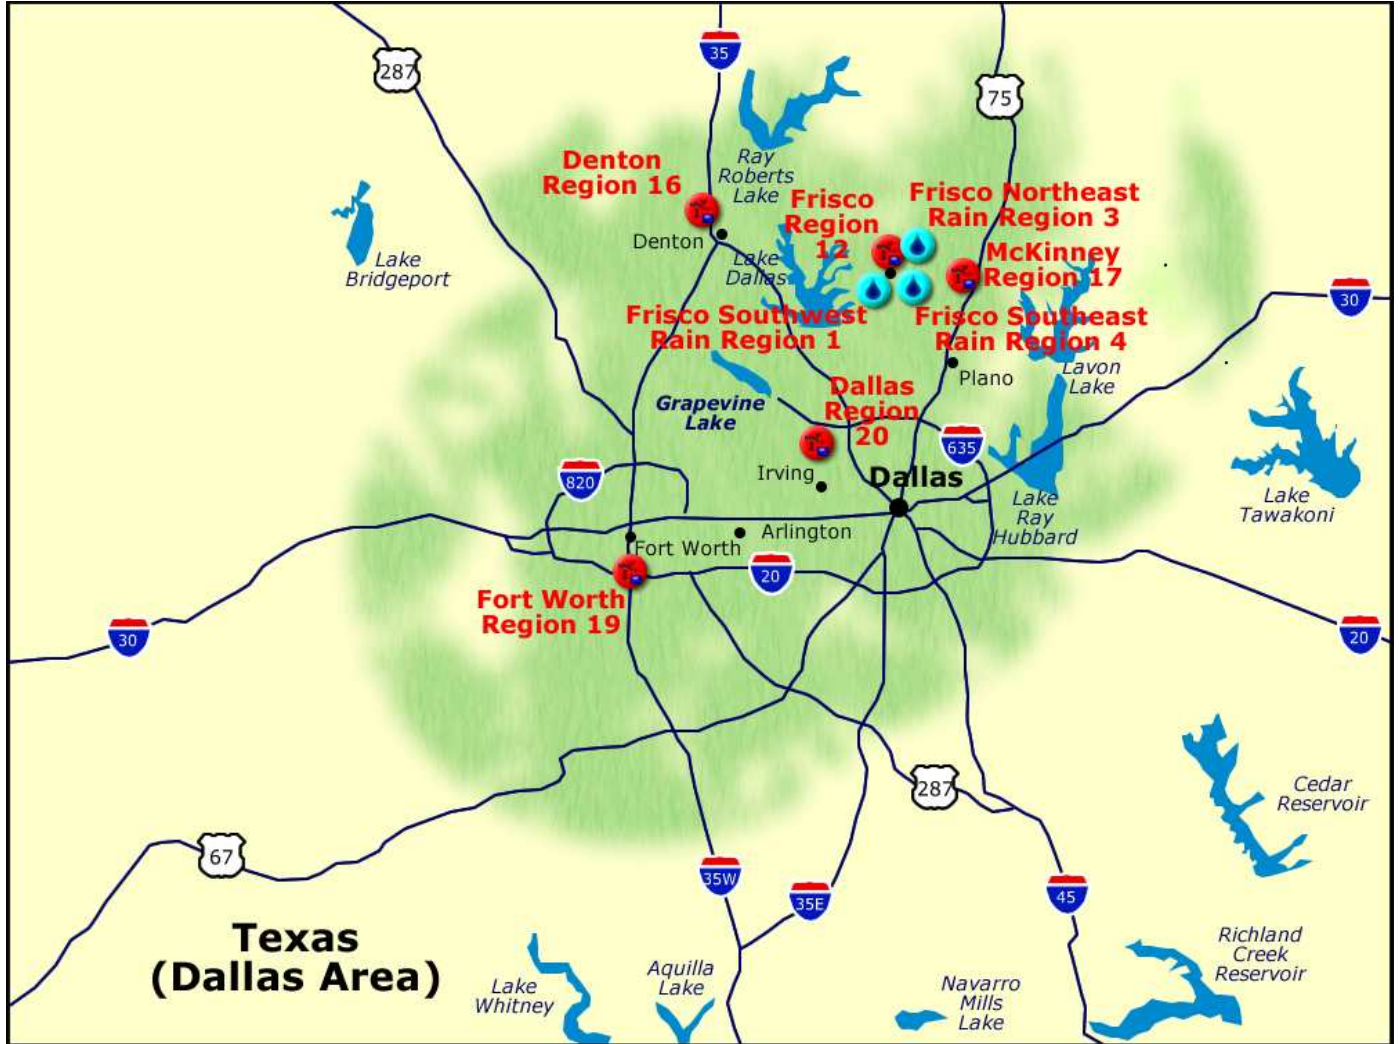

Because of the nature of radio transmission, strength of signal varies depending upon location.



 Because of the nature of radio transmission, strength of signal varies depending upon location.

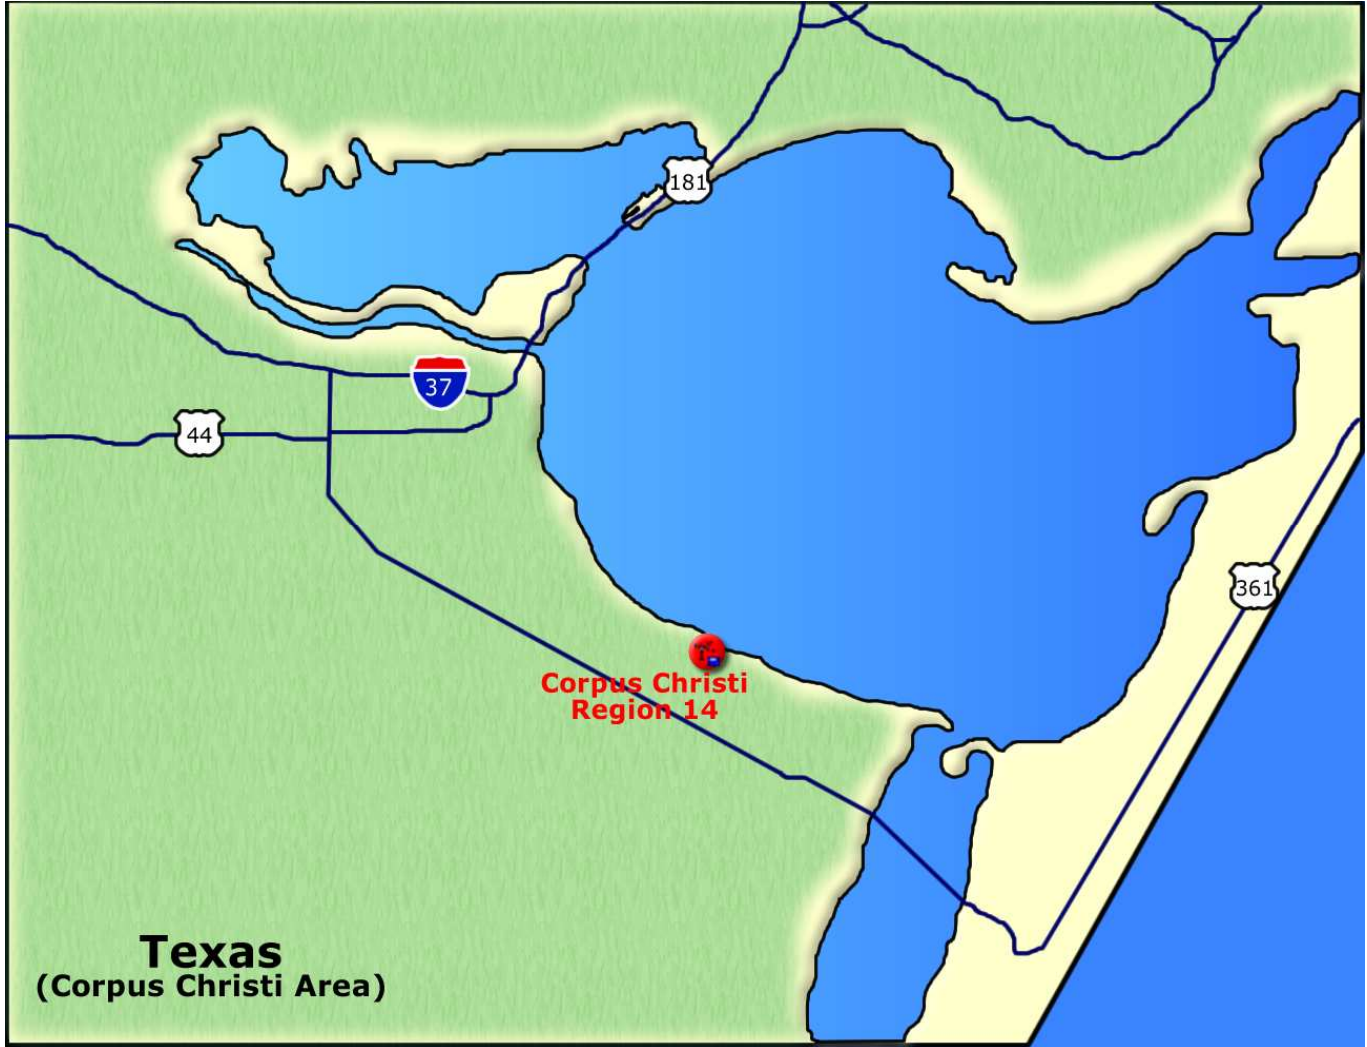

Because of the nature of radio transmission, strength of signal varies depending upon location.