



Ref.	Part Description	L20VH M20VH	L20VH-PM M20VH-PM
UPPER ASSEMBLY			
1	Fulcrum Pin	100793	100793
2	Arm Hood	100775	100775
5	Arm Spring Assembly	114818	114818
3	Arm Spring	100172	100172
4	Wedge	111188	111188
6	Wedge Pin	100331	100331
NOZZLES (Specify nozzle size when ordering)			
7	Straight Bore	105780	105780
-	Off Axis 3 Degree	106171	106171
-	Low Pressure 0 Degree	104571	104571
-	Low Pressure 3 Degree	104572	104572
-	Rain Flow	111088	111088
BEARING ASSEMBLY			
8	Bearing Assembly	118343	117744
9	Top Seal Washer (Black)	104183	104183
10	Metal Top Seal Washer	100280	100280
11	Bearing Spring	105431	105431
12	Bearing Sleeve (Brass)	104153	-
12	Bearing Sleeve (Plastic)	-	(104631)
13	Bearing Washer (2) (Black)	104181	104181
14	Wear Washer (White)	104696	104696
15	Bearing Nipple	102020	102020

Note: Part numbers enclosed in brackets () are not available individually, but may be sold in assemblies or kits.