



Ref.	Part Description	L20H M20H	L20H-PM M20H-PM	(B) L2020H
<b>UPPER ASSEMBLY</b>				
1	Fulcrum Pin	100793	100793	100793
2	Arm Hood	100775	100775	100775
3	Arm Spring	100172	100172	100172
4	Arm Spring Assembly	114830	114830	114830
5	Arm Washer	100173	100173	100173
<b>NOZZLES (Specify nozzle size when ordering)</b>				
6	Straight Bore	105780	105780	105780
-	Off Axis 3 Degree	106171	106171	-
-	Low Pressure 0 Degree	104571	104571	104571
-	Low Pressure 3 Degree	104572	104572	-
-	Rain Flow	111088	111088	111088
-	Plastic Quick Fit SBN (A)	117324	117324	-
<b>BEARING ASSEMBLY</b>				
7	Bearing Assembly	104695	(104585)	(105721)
8	Top Seal Washer (White)	100279	104183	100279
9	Metal Top Seal Washer	100280	100280	100280
10	Bearing Spring	105431	105431	105431
11	Bearing Sleeve (Brass)	104153	-	(104161)
-	Bearing Sleeve (Plastic)	-	(104631)	-
12	Bearing Washer (2) (Black)	104181	104181	104181
13	Wear Washer (White)	104696	104184	104696
14	Bearing Nipple	102020	102020	102020

(A) To be used with 117312 quick fit connector.

(B) Not available; no replacement

Note: Part numbers enclosed in brackets ( ) are not available individually, but may be sold in assemblies or kits.