



Ref.	Part Description	29JH 1/2" 29B TNT 1/2"	29JH 3/4" 29B TNT 3/4"	29JH LA 1/2" 29B TNT LA 1/2"	29JH LA 3/4" 29B TNT LA 3/4"
UPPER ASSEMBLY					
1	Fulcrum Pin	100271	100271	100271	100271
2	Arm Hood	100968	100968	100968	100968
3	Arm Spring Assembly	104233	104233	(104273)	(104273)
4	Arm Spring	100305	100305	100305	100305
5	Arm Washer	100270	100270	100270	100270
NOZZLES (Specify nozzle size when ordering)					
6	Straight Bore	105842	105842	-	-
-	Straight Bore/w Vane	106131	106131	-	-
-	Keyhole	106353	106353	-	-
-	Low Angle 9 Degree	-	-	(104279)	(104279)
-	Rain Flow	111089	111089	-	-
BEARING ASSEMBLY (H Style)					
7	Bearing Assembly	104919	(104212)	104919	(104212)
8	Top Seal Washer (White)	100279	100279	100279	100279
9	Metal Top Seal Washer	100280	100280	100280	100280
10	Bearing Spring	100272	100272	100272	100272
11	Bearing Sleeve (Brass)	104153	(104161)	104153	(104161)
12	Bearing Washer (2) (Black)	104181	104181	104181	104181
13	Wear Washer (Orange)	104184	104184	104184	104184
14	Bearing Nipple	102020	102020	102020	102020
BEARING ASSEMBLY (Old TNT Style) (A)					
8	Top Seal Washer (White)	100279	100279	100279	100279
9	Metal Top Seal Washer	100280	100280	100280	100280
10	Bearing Spring	100272	100272	100272	100272
11	Bearing Sleeve (Brass)	(A)	(A)	(A)	(A)
13A	Wearing Ring (T-Ring) (White)	100586	100586	100586	100586
12	Bearing Washer (Black)	104181	104181	104181	104181
14	Bearing Nipple	102020	102020	102020	102020

(A) Bearing sleeve not available. Use "H" Bearing Assembly.

Note: Part numbers enclosed in brackets () are not available individually, but may be sold in assemblies or kits.