



Ref.	Part Description	OLD STYLE*			NEW STYLE*	
		L36H	L36BH	L36ABJ	L36BH	L36ABH
UPPER ASSEMBLY						
1	Body Cap	(108037)	(108037)	(108037)	(114474)	(114474)
2	Arm Spring Assy	-	-	-	(115059-01)	(115059-02)
3	Arm	(108576-01)	(108576-01)	(108573)	(115063)	(112236)
4	Arm Spring	(111149)	(111149)	(111149)	(114472)	(114472)
5	Arm Washer	100270	100270	100270	100270	100270
6	Fulcrum Pin	(110726)	(110726)	(110726)	(110726)	(110726)
7	Body	(108818)	(108818)	(108818)	(114319)	(114319)
NOZZLES (Specify nozzle size when ordering)						
8	Straight Bore, Quick Fit	107881	107881	107881	107881	107881
8	Low Pressure, Quick Fit	109247	109247	109247	109247	109247
BEARING ASSEMBLY						
9	Bearing Assembly	105833-01	(109135-01)	(109135-02)	104152	(115065)
10	Top Seal Washer	(W) 100313	(W) 100313	(W) 100313	(Gr) 103709	(W) 100313
11	Metal Top Seal Washer	100312	100312	100312	100312	100312
12	Bearing Spring	106237	106237	106237	106237	106237
13	Bearing Sleeve	(105832)	(109136)	(109136)	103670	103670
14	Bearing Washer	(B) 100726	(B) 100726	(B) 100726	(B) 100726	(B) 100726
15	Wear Washer	(O) 103058	(O) 103058	(O) 104762	(O) 103058	(O) 104762
16	Seal or Brg Washer	(G) 102345	(G) 102345	(B) 100726	(G) 102345	(B) 100726
17	Bearing Nipple	(105831)	(105831)	(105831)	103669	103669

Bearing washer color code: W = White, Gr = Dark Green, B = Black, O = Orange, G = Grey

* NOTE: Old style L36 has a plastic bearing nipple, while new style L36 has a brass bearing nipple.

Old and new parts are not interchangeable except when the part numbers are the same.

Note: Part numbers enclosed in brackets () are not available individually, but may be sold in assemblies or kits.