



Ref.	Part Description	46H	46AH
		46WH	46AWH
UPPER ASSEMBLY			
1	Fulcrum Pin	(101157)	(101157)
2	Arm Spring	(100305)	(100305)
3	46H Arm Hood	(181041)	(181041)
4	Arm	(100353)	(102560)
5	Arm Washer	(100270)	(100270)
6	Body	(105871)	(105871)
NOZZLES (Specify nozzle size when ordering)			
7	Drive Nozzles		
-	Straight Bore w/Vane	106131xx	106131xx
-	Nozzle	105842xx	105842xx
7A	Plastic Straight Bore w/Vane	71-P00002x	71-P00002xx
8	Spreader Nozzles		
-	Spreader 7 Degree	100225xx	100225xx
-	Spreader 20 Degree	100226xx	100226xx
-	Spreader Plug (W Models)	100255	100255
-	Plastic Plug	71-P00001	71-P00001
BEARING ASSEMBLY			
9	Bearing Assembly	(105833-01)	(105833-01)
10	Top Seal Washer (White)	(100313)	(100313)
11	Metal Top Seal Washer	(100312)	(100312)
12	Bearing Spring	(106237)	(106237)
13	Bearing Sleeve	(105832)	(105832)
14	Bearing Washer (Black) (2)	(100726)	(100726)
15	Wear Washer (White)	(104762)	(104762)
16	Bearing Nipple	(105831)	(105831)

Note: Part numbers enclosed in brackets () are not available individually, but may be sold in assemblies or kits.