

## FD-401 FOUR-IN-ONE DECODER IN VALVE BOX

4. LOCATION OF DECODER IS FOR GRAPHICAL PURPOSES. LOCATION OF DECODER AND SPLICES SHALL BE POSITIONED CLOSE TO SPRINKLER CASE AT TIME OF INSTALLATION.

3. ANY OUTPUT WIRES FOR UNUSED ADDRESSES SHALL BE PLACED IN A RAIN BIRD CONNECTOR (ONE PER ADDRESS).

OPERATE ONE (1) SOLENOID PER ADDRESS



