

AUTOMATIC SEPARATOR PURGE CONTROLLER

The Rain Bird Automatic Purge Controller is designed to purge the separator's collection chamber either automatically or manually. The purge controller is designed for use with either the motorized ball valve or diaphragm valves that are supplied.

Auto/Manual Switch

The position of this switch determines if the purge controller is in the auto or manual mode.

In the auto position, the purge controller will automatically purge the separator at a predetermined interval and for a predetermined amount of time as described under "Time Settings" below.

In the manual position, power is disconnected from the timer and manual operation of the purge valve is now possible by using the open and close switch. This switch is springloaded and must be held in position.


If a motorized ball valve is used, the switch must be held into the open or closed position until the valve completes its travel.

If a diaphragm valve is used, then the open position is used to energize the solenoid and open the valve. If the switch is released, then the solenoid will de-energize and the valve will close; ending the purge cycle.

Time Settings

Off Time – This dial is used to set the purge cycle frequency.

On Time – This dial is used to set the length of the purge time.

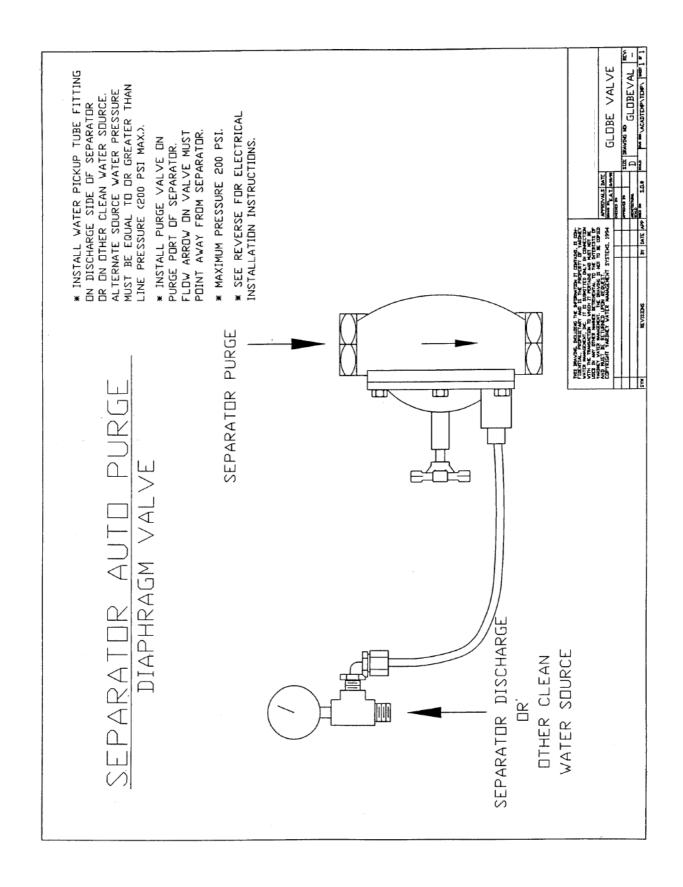

SEPARATOR AUTOMATIC PURGE SYSTEM 120 VOLT 60 HZ INPUT

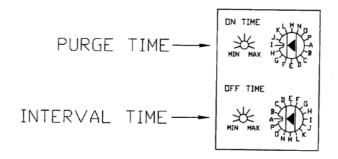


FIG. 1 - RELAY FACE

DIAL	TIMING							
SETTING	RANGE							
B C	0.6 - 2.5 SEC. 1.5 - 5 SEC. 2.5 - 10.5 SEC.							
D	5 - 21 SEC.							
Ε	10 - 42 SEC.							
D E F G	0.4 -1.4 MIN.							
G	0.7 - 2.8 MIN.							
Н	1.5 - 5.5 MIN.							
I	3 - 11 MIN.							
J	5.5 - 22.5 MIN.							
. K	11 - 45 MIN.							
. L	0.4 - 1.5 HR.							
M	0.8 - 3 HR.							
N	1.5 - 6 HR.							
	3 -12 HR.							
Р	6 -24 HR.							

NOTES:

CONNECT PURGE VALVE AS SHOWN ON WIRING DIAGRAM

FIG. 2 - KNOB SETTINGS

THIS DRAVING, INCLUDING THE INFORMATION IT CINTAINS, IS CON- FIDENTIAL, PROPRIETARY, AND IS THE PROPERTY OF YARDINGY VATER HAMACHESTY, INC. IT IS SUBMITTED DAY, IN CONNECTION VATER HAMACHESTY IN THE PROPERTY OF YARDING YOUR USED IN ANY DIMENSIONAL THE DRAVING IS THE INTERESTS OF WARDEY VATER HAMACHESTY. THE DRAVING IS NOT TO BE COPPED AND HUST BE RETURNED UPON REQUEST.						APPROVALS	DATE	C	INTRII	PANEL	/\/ID	ING
						CHECKES SW					** 114.	
ļ			٠,		Г	THE CHANGE		SIZE	PART NO	CONTO	202	REY
	A	UPDATED NOTES.		11-06	-			-		CONTRO	350	A
	MYZ	REVISIONS	BY	DATE	APP	(M29 OH		KALD.	ET-Terra	VERTE CONTROLLE	PE PERT 1	or 1

