 


ESP-Me


Special Features

Action Steps:

1 Turn dial



2 Hold for 3 seconds, then release

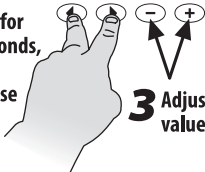

3 Adjust value

Save Programs

TEST ALL STATIONS

© Contractor Default

SAVED

◀ ▶ - +

Restore Saved Programs

© Contractor Default

ADVANCED WATERING CYCLES

RESTORED

◀ ▶ - +

Reset To Factory Defaults

NOTE: Rain Sensor status is reset to Bypass



SEASONAL ADJUST %

CLEARED

◀ ▶ - +

Change Delay Between Valves

OFF

Set Master Valve Status By Station




SET STATION RUN TIMES





Bypass Rain Sensor For Any Station(s)

RAIN SENSOR

Permanent Days Off




1 MON






NOTE: Applies to Advanced Watering Cycles ONLY.



Total Run Time Calculator By Program

MANUAL PROGRAM

NOTE: Total Run Time displays automatically after 3 seconds.

