



FILTRON 110 (DC/AC)

User's Manual



FILTRON 110 (DC/AC) - List of features

- The “FILTRON 110” is a modular backflushing controller for automatic filters of 1 to 10 stations.
- There exist DC and AC models.
- The DC model can be powered either by 6v DC or 12v DC and it activates 2 wired 12v DC latching solenoids. The voltage for the solenoids switching is boosted by a charge pump.
- The AC model contains an internal transformer that generates the 24v AC for the solenoids.
- Flushing cycles may be triggered either by time or by the embedded electronic DP sensor reaching the set point, or by a dry contact signal from an external DP sensor.
- Endless looping problems can be eliminated by detecting repeated consecutive cycles passing beyond a predefined limit.
- The unit can optionally handle a Pressure-Sustaining / Main valve, and an Alarm output.
- The unit is equipped with a customized LCD display and key board.
- The unit counts separately the number of flushing cycles triggered by DP, by time and manually.



How to program the controller

The controller is equipped with an LCD display and 4 keys as displayed below. When the unit is left untouched for a minute the display is switched off and the only life signal is given by a beep sound that can be heard every 20 seconds. Holding down any of the keys for a few seconds will bring the screen back to life.




The screen consists of several fields, some of them are editable and some of them are not. For inserting EDIT MODE the ENTER key has to be pushed. The EDIT MODE is indicated by blinking of the characters at the currently editable field. Each time the ENTER key is pushed again, the next editable field becomes under focus and starts blinking. While in EDIT MODE the “+” and “-“ keys can be used for changing the value under focus. Pushing the ENTER key again will set the selected value to the current field and move the focus to the next editable field which will start blinking. Once entering this process of passing through the edible fields, the user has no way back but by pushing the ENTER key repeatedly, he passes through the chain of edible fields until arriving back to the FLUSH TIME field, meeting no more blinking fields.



Notice that before the first use of the unit, it may be necessary to pass through the configuration process prior to defining the flushing program in order to adjust the features of controller to the specific application. The configuration process is described below.

The chain of editable fields

Following is the chain of edible fields. The existence of the DP SET-POINT field depends on whether the system contains a built-in electronic DP or not.

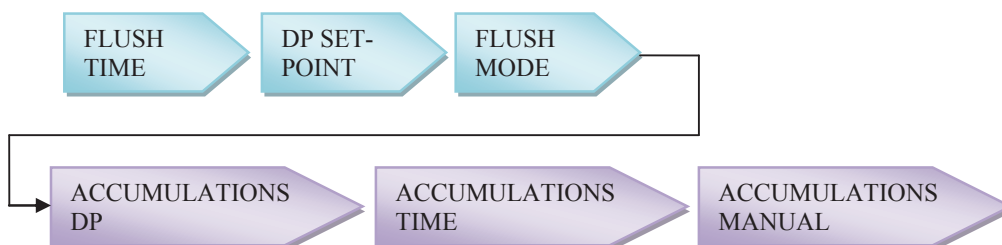

The Flush Time

Defines the duration of the flushing time per station. The following options are selectable:

5-20 sec in steps of 1 sec
20-55 sec in steps of 5 sec
1-6 min in steps of 0.5 min

The DP Set Point

At this field the user defines the pressure difference between the filter's inlet and outlet that when reached, a flushing cycle will take place. This field appears only when the system includes the built in electronic DP sensor.

When the pressure is expressed in BAR the range of values is 0.1 – 2.0 BAR.
When the pressure is expressed in PSI the range of values is 1- 30 PSI.

When the system does not include the built in electronic DP sensor but is connected to an external DP sensor, the flushing request signal arrives in the shape of a closed dry contact.

The Flush Mode

The Flush Mode defines how the flushing cycles is triggered. The selectable options are as follows:

OFF - no flushing will take place
By time – In this case the flushing cycles will be repeated in a selected interval or will be triggered by the DP signal depending on what happens first. No matter how was the flushing cycle started the interval to the next cycle will start to be measured again after each ending of a flushing sequence. The selectable intervals are the following:

5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 55, 60 minutes
2, 3, 4, 5, 6, 8, 12, 18, 24, 72, 120 hours

dp – flushing will be triggered by DP only.



If the “+” and “-“ keys are pressed and held down simultaneously the “Flush Mode” field will show the left time until next cycle, alternately hours and minutes.

The Accumulations

The unit accumulates and displays the number of flushing cycles caused by DP, by time, or manually. At each of the accumulation fields, the “+” or “-“ keys may be used for clearing the accumulated value.


The Configuration

In order to enter into the configuration process press and hold down the ENTER key for 3 seconds.

The unit will detect how many “plug in” boards (each of 2 outputs) are used in the particular case.

During the configuration process the following features are defined:

Main Valve (sustaining valve) - Yes/ No. When the answer is “Yes” the Pre Dwell delay between the Main Valve opening and the opening of Station No. 1 can be defined.
The selectable delay steps are:
5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 55 sec
1, 1.5, 2, 2.5, 3, 3.5, 4, 4.5, 5, 5.5, 6 min


Dwell time -	the delay between stations – 5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 55, 60 sec.
DP delay -	the delay during which the DP sensor reading is expected to remain stable before reaction – 5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 55, 60 sec.
Looping limit -	the number of consecutive flushing cycles triggered by the DP sensor before deciding that there is an endless lopping problem. The options are: 1-10 or “no” which means ignoring the looping problem.
Alarm -	Yes/No – allocating one output for alarm activation.
Delay Valve -	Yes/No – allocating an output for Delay Valve activation.
View Outputs -	this is a special mode that enables passing through the list of outputs to see how each output was allocated. Use the + key to change the “no” into “yes” and confirm by “Enter”, then keep using the + key to pass through the list. At the bottom left corner the ordinal number of the output is displayed and its allocated function appears in large letters at the center of the screen. Notice that the number of possible outputs that can be used is always an even number since it results from the number of “plug in” boards (each of 2 outputs) included. However if the number of outputs needed is not an even number, then the last valve allocated for flushing may be canceled by use of the  manual operations key .
Pressure units -	deciding about the units to be used for pressure measurement. Selecting between BAR or PSI .
Calibration-	Zero calibration of the built in electronic DP sensor. While the sensor ports are disconnected select Calibration = Yes.

Handling Endless Looping problems

As explained above, endless looping problem will be declared when the number of consecutive flushing cycles triggered by the DP sensor exceeds the “Looping limit” defined during configuration. When endless looping problem was detected, the DP indication will no longer be considered as a trigger for flushing. The following flushing cycles will be triggered by the interval count down only.

The problem will be considered as solved when the constant indication of the DP sensor will be removed.

Handling Low pressure

When a closed contact indication is received at the low pressure input of the controller, the symbol  will start to appear blinking at the display. All activities will stop including the countdown to the next flushing cycle. If the low pressure happened while a flushing sequence was in progress, when the low pressure condition terminates the flushing sequence will start from the beginning rather than continue from the stop point.


Connecting the DP sensor to the filter system

The DP sensor is connected to the filter system by 2 command tubes, the one which comes from the filter inlet (High pressure) will be connected to the red point, and the one that comes from the outlet (Lower pressure) will go to the black point. It is important to put a small filter of 120 mesh (not supplied) between the red point and the high pressure connection point.


The small filter to be added between the high pressure inlet and the red point. It is the user’s responsibility to add this filter.




Low battery

The unit has two levels of low battery indication. At the first level when the battery voltage drops to the first level, the sign  will start to appear at the screen. When the battery voltage drops further and reaches the second level, all outputs will shut down, the screen will be cleared leaving only the low battery icon.

Manual activation

A flushing sequence can be manually activated by the “MANUAL” key. When manually activated the icon  will appear on the display. The same key will be used for manually terminating a sequence in progress.

Timing Diagram

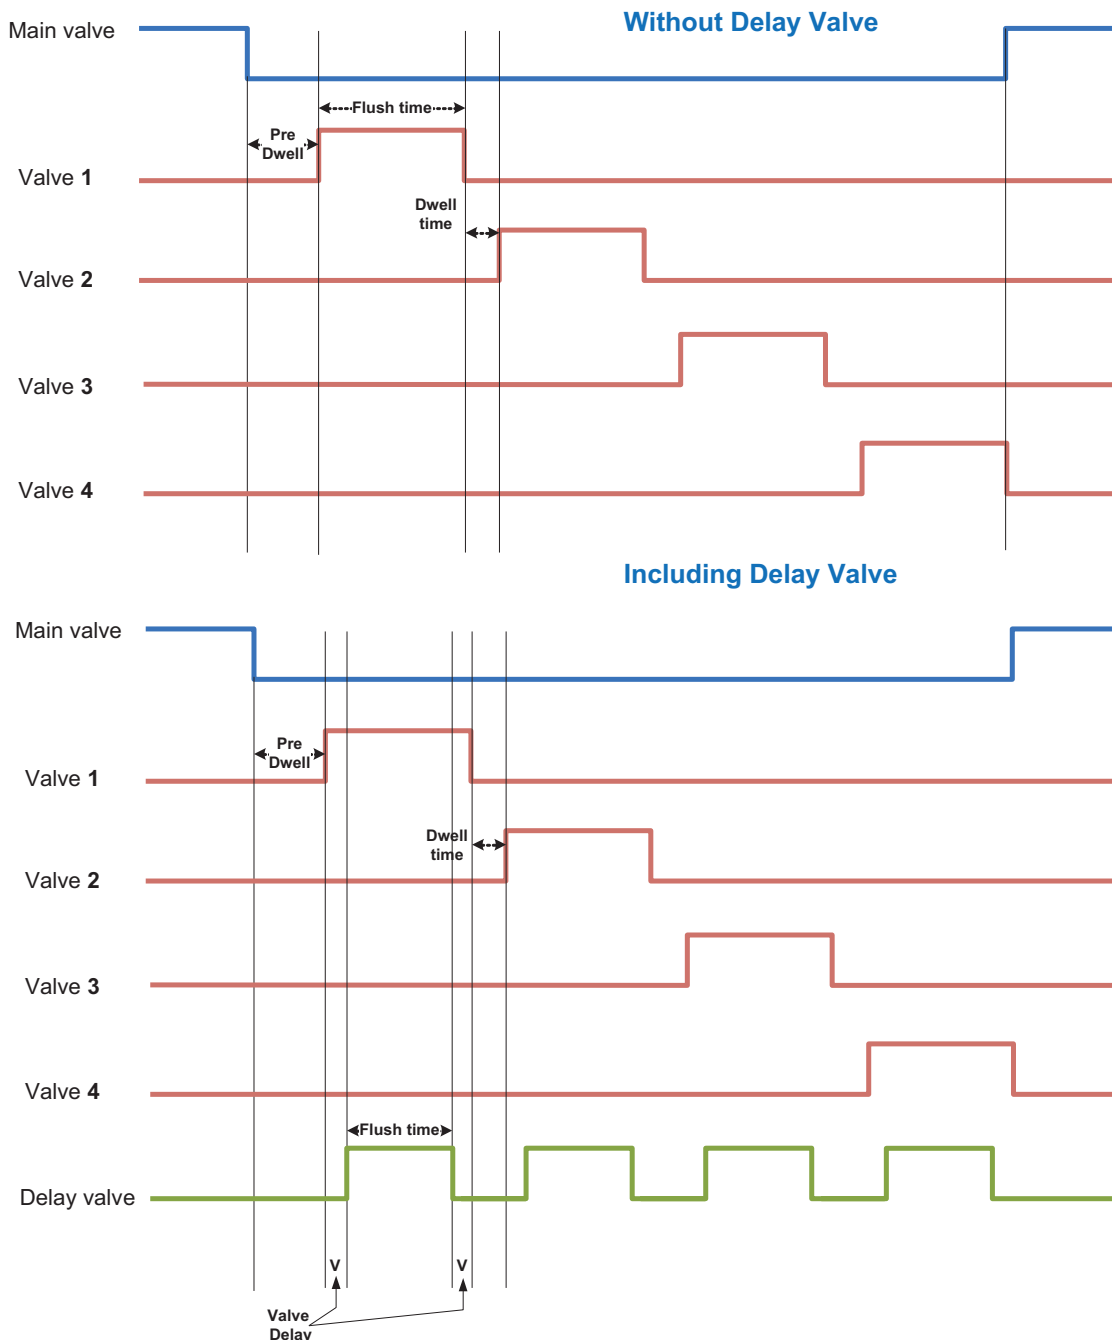


Wiring Diagram

DC MODEL

The drawing below shows the wiring of the DC model of the controller.

Notice that:

1. The External DP sensor is optional and it is intended for use in cases there is no Embedded Electronic DP included.
2. The powering of the unit can be either by 6v DC or 12v DC.
3. The solenoids will be of 12v DC latch.

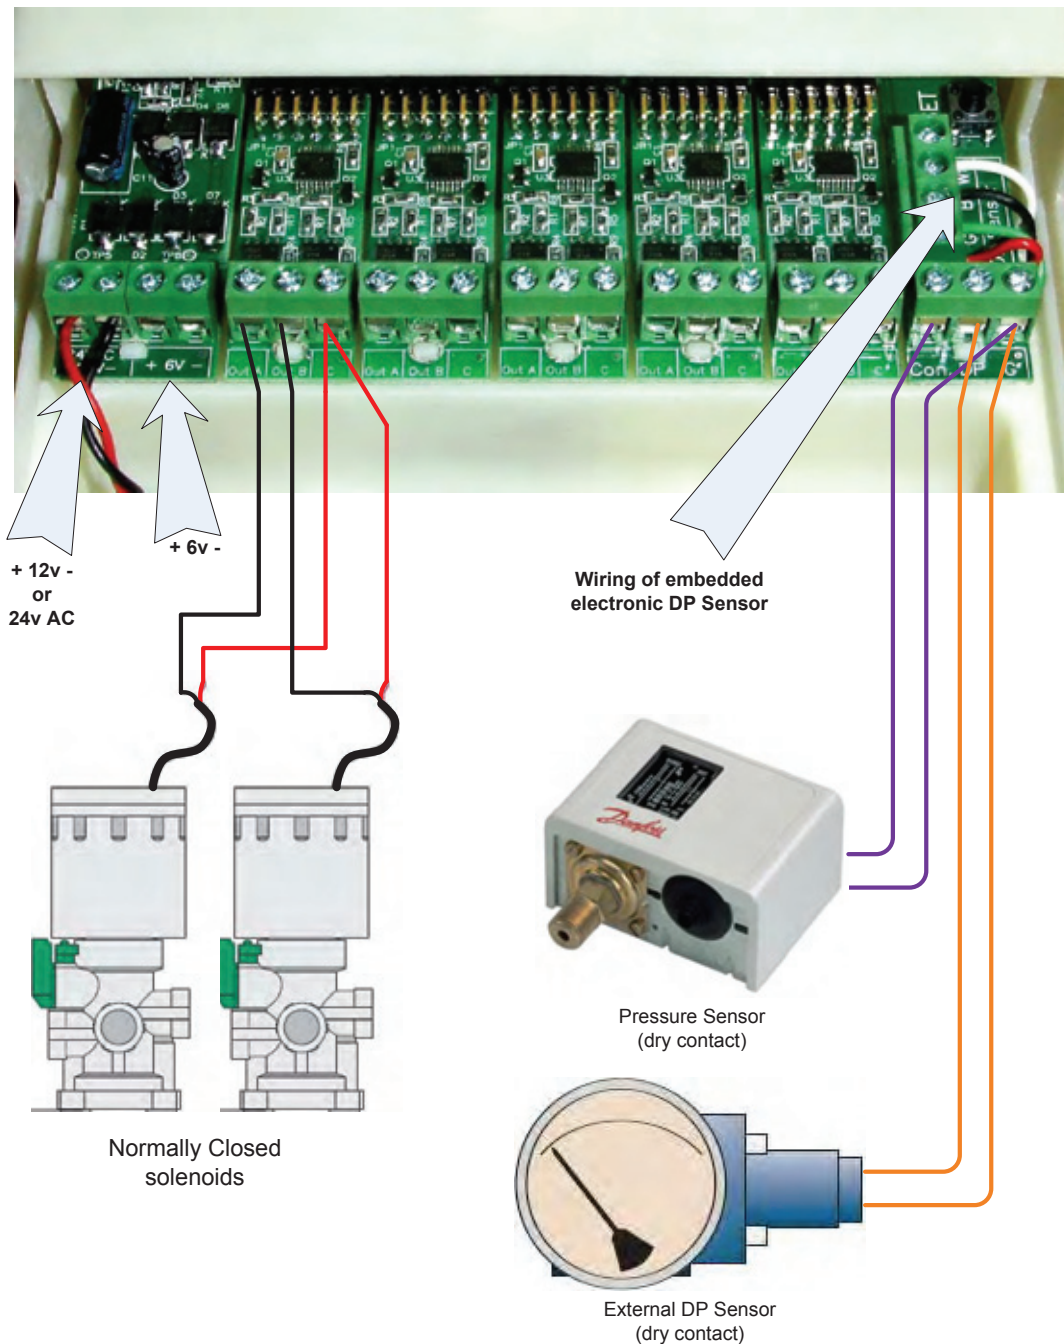


AC MODEL

The drawing below shows the wiring of the AC model of the controller.

Notice that:

1. The External DP sensor is optional and it is intended for use in cases there is no Embedded Electronic DP included.
2. The powering of the unit is by 24v AC transformed from 220/110 v AC.
3. The solenoids will be of 24v AC.

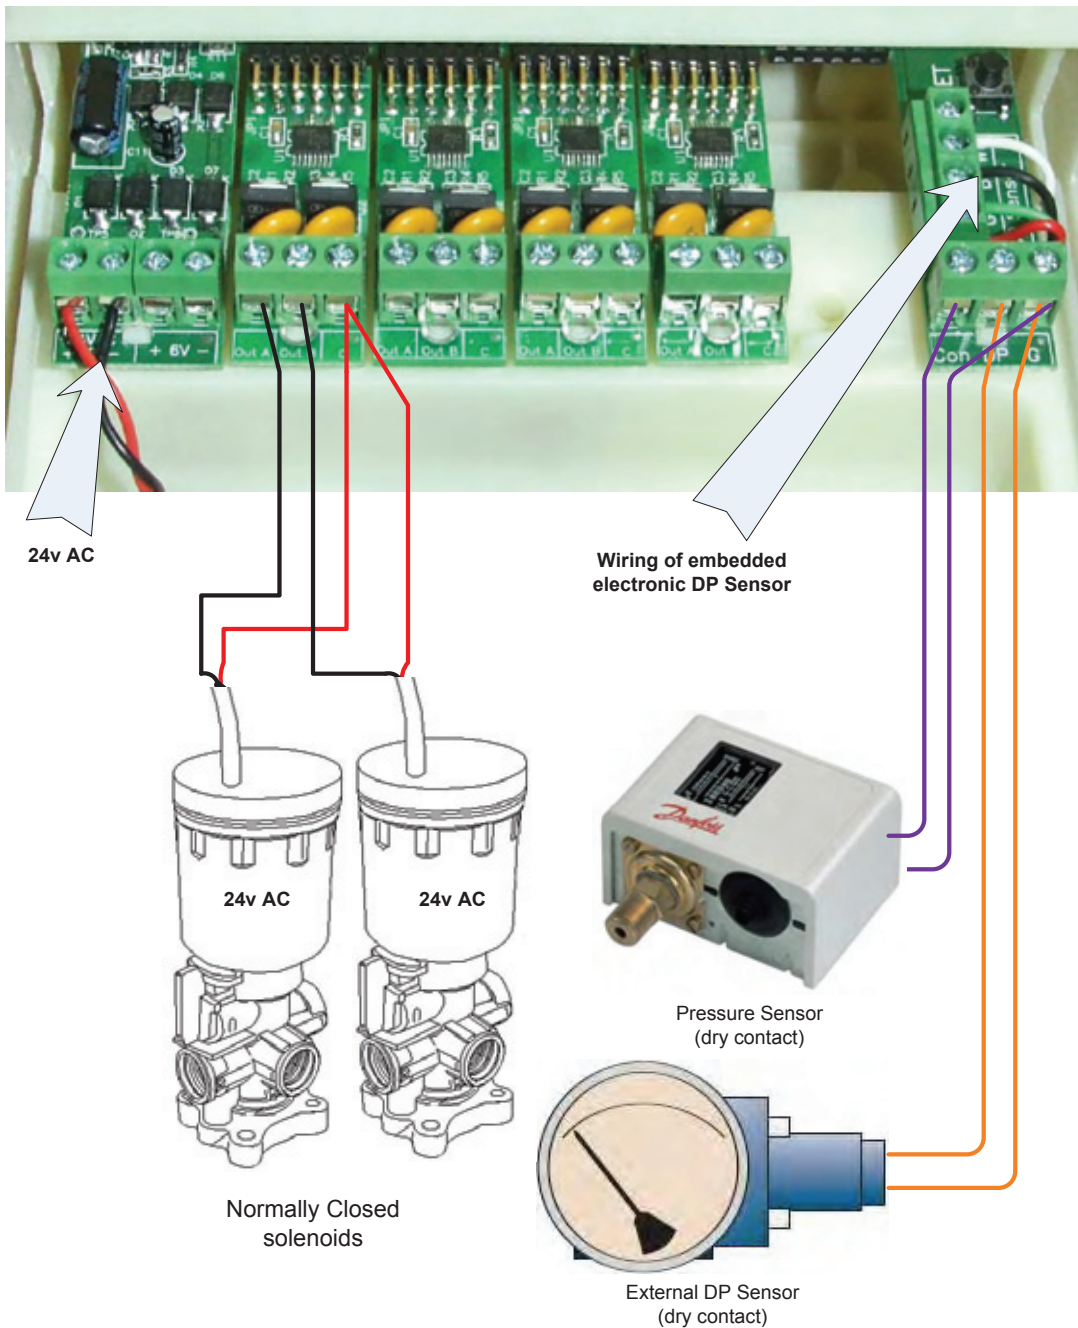

TECHNICAL DATA

DC MODEL

Power source: 6v supplied by 4 x 1.5 "D" size alkaline batteries.
or 12v DC dry battery
or 12v rechargeable battery with solar panel of 2 watts

Outputs : 12v DC latching solenoids.

DP: Embedded electronic analog DP sensor
or external dry contact DP sensor.

Pressure Sensor: Dry contact pressure sensor

Operating temperature: 0-60° C.

AC MODEL

Power source: 220 or 110 v AC 50 or 60 Hz with built in transformer to 24v AC.

Outputs : 24v AC solenoids.

DP: Embedded electronic analog DP sensor
or external dry contact DP sensor.

Pressure Sensor: Dry contact pressure sensor

Operating temperature: 0-60° C.



Rain Bird Corporation

6991 E. Southpoint Road
Tucson, AZ 85756
Phone: (520) 741-6100
Fax: (520) 741-6522

Rain Bird Technical Services

(800) RAINBIRD (1-800-724-6247)
(U.S. and Canada)

Rain Bird Corporation

970 West Sierra Madre Avenue
Azusa, CA 91702
Phone: (626) 812-3400
Fax: (626) 812-3411

Specification Hotline

800-458-3005 (U.S. and Canada)

Rain Bird International, Inc.

1000 West Sierra Madre Ave.
Azusa, CA 91702
Phone: (626) 963-9311
Fax: (626) 852-7343

The Intelligent Use of Water™

www.rainbird.com