



| Ref.   | Part Description           | 20JH     | 20 ADJ-B |
|--|----------------------------|----------|----------|
| <b>UPPER ASSEMBLY</b>                              |                            |          |          |
| 1  | Fulcrum Kit                | 177415   | —        |
| 2  | Fulcrum Pin                | (100793) | (100793) |
| 3  | Arm Hood                   | (100775) | —        |
| 4  | Arm Spring Assembly        | 177525   | (104984) |
| 5  | Arm Spring                 | (100133) | (106330) |
| <b>NOZZLES (Specify nozzle size when ordering)</b> |                            |          |          |
| 6  | Straight Bore              | 105780xx | 05780xx  |
| —  | Nozzle & Vane Assembly     | 106160xx | —        |
| —  | Vane                       | 101618   | 101618   |
| 7  | Adjustment Screw           | —        | 100136   |
| 8  | Spring                     | —        | 100203   |
| <b>BEARING ASSEMBLY</b>                            |                            |          |          |
| 9  | Bearing Assembly           | 177422   | (109220) |
| 10   | Top Seal Washer (White)    | (100279) | —        |
| 11   | Metal Top Seal Washer      | (100280) | —        |
| 12   | Bearing Spring             | (105431) | —        |
| 13   | Bearing Sleeve (Brass)     | 177510   | (104983) |
| 14   | Bearing Washer (2) (Black) | (104181) | (104181) |
| 15   | Wear Washer (White)        | (104696) | (104696) |
| 16   | Bearing Nipple             | 177516   | (104982) |
| 17   | Bearing Washer Kit         | 177445   | —        |
| 10   | Top Seal Washer (White)    | (100279) | —        |
| 11   | Metal Top Seal Washer      | (100280) | —        |
| 12   | Bearing Spring(105431)     | —        | —        |
| 14   | Bearing Washer (2) (Black) | (104181) | (104181) |
| 15   | Wear Washer (White)        | (104696) | (104696) |

Note: Part numbers enclosed in brackets ( ) are not available individually, but may be sold in assemblies or kits.