



Note: Part numbers enclosed in brackets () are not available individually, but may be sold in assemblies or kits.

Ref.	Part Description	30H 30WH	30PWH	30FH 30FWH
UPPER ASSEMBLY				
1	Fulcrum Kit	177417	177417	177417
2	Fulcrum Pin	(100271)	(100271)	(100271)
3	Arm Hood	(100968)	(100968)	(100968)
6	Arm Washer	(100270)	(100270)	(100270)
4	Arm/Spring Assembly	177529	177530	177529
5	Arm Spring	(231061)	(100358)	(231061)
NOZZLES (Specify nozzle size when ordering)				
7	Drive Nozzles			
-	Straight Bore	105842xx	105842xx	105842xx
-	Straight Bore w/Vane (E Models)	106131xx	106131xx	—
-	Keyhole	106353xx	106353xx	106353xx
-	Spreader Nozzles			
8	Spreader 7 Degree	100225xx	—	—
8	Spreader 20 Degree	100226xx	—	—
9	Spreader Plug (W Models)	100255	—	—
	Vane (E Models Not Pictured)	105816	105816	—
BEARING ASSEMBLY				
11	Bearing Assembly	180712	177425	177425
12	Top Seal Washer (W=Wht/G=Grn) G (103709)	W (100313)	W (100313)	W (100313)
13	Metal Top Seal Washer	(100312)	(100312)	(100312)
14	Bearing Spring	(106237)	(106237)	(106237)
15	Bearing Sleeve	177511	177511	177511
16	Bearing Washer (Black)	(100726)	(100726)	(100726)
17	Wear Washer (White)	(104762)	(104762)	(104762)
18	Seal Washer (Black)	(100726)	(100726)	(100726)
19	Bearing Nipple	177517	177517	177517
BEARING ASSEMBLY				
10	Bearing Washer Kit	180703	177448	177448
12	Top Seal Washer (W=Wht/G=Grn) G (103709)	W (100313)	W (100313)	W (100313)
13	Metal Top Seal Washer	(100312)	(100312)	(100312)
14	Bearing Spring	(106237)	(106237)	(106237)
16	Bearing Washer (Black)	(100726)	(100726)	(100726)
17	Wear Washer (White)	(104762)	(104762)	(104762)
18	Seal Washer (Black)	(100726)	(100726)	(100726)



Note: Part numbers enclosed in brackets () are not available individually, but may be sold in assemblies or kits.