



Ref.	Part Description	65PJ-TNT	65PJADJ-TNT
------	------------------	----------	-------------

<b>UPPER ASSEMBLY</b>			
1	Fulcrum Pin	100348	
2	Arm Spring Assembly PJ	177508	
3	Arm Spring	(100369)	

<b>NOZZLES (Specify nozzle size when ordering)</b>			
4	ADJ Nozzle Assembly	10038516	
5	Pin	(100203)	
6	Spring	(100136)	
7	Range Nozzle	100382xx	

<b>TRIP MECHANISM</b>			
9	Upper Trip Arm	100370	
11	Lower Trip Arm	100373	
8	Trip Hardware Kit	179991	
10	Trip Spring	(231079)	
12	Spacer Washer (2)	(231077)	
13	E-Ring	(231078)	
14	Trip Shaft	(100365)	

<b>BEARING ASSEMBLY</b>			
15	Bearing Washer Kit	177475	
16	Bearing Spring	(231064)	
17	Metal Top Seal Washer	(231063)	
18	Top Seal Washer (White)	(100313)	
21	Bearing Washer (2) (Black)	(104038)	
22	Wear Washer (Orange)	(104037)	
19	Friction (Trip) Collar	(B) 105774	
20	Bearing Sleeve (FNPT)	177500	
20	Bearing Sleeve (BSP)	177499	
23	Bearing Nipple	177518	

- (A) 65D arm is no longer available, use current PJ arm.  
 (B) Friction Trip Collars available individually or with sleeve.  
 Kit 105774 includes Quantity of 1

Note: Part numbers enclosed in brackets ( ) are not available individually, but may be sold in assemblies or kits.