



Ref.	Part Description	25BPJ-FP-ADJ	25BPJ-FP ADJ-DA-TNT
UPPER ASSEMBLY			
1	Fulcrum Kit	(177461)	(177461)
2	Fulcrum Pin	(100793)	(100793)
3	PJ Arm Spring Assembly	177507	177507
4	Arm Spring (for PJ)	(104933)	(104933)
5	Adjustment Spring	100136	100136
6	Adjustment Pin	(100203)	(100203)
TRIP MECHANISM			
7	Upper Trip	(108994)	(108994)
8	Trip Spring	(105720)	(105720)
9	Lower Trip Assembly (FP)	(110124)	(110124)
10	Trip Lever	109484	109484
11	Trip Shaft	(104734)	(104734)
NOZZLES (Specify nozzle size when ordering)			
12	Straight Bore Nozzle	105780xx	105780xx
BEARING ASSEMBLY			
15	Bearing Assembly	(106181)	110950
16	Bearing Spring	-	(100182)
17	Skirted Top Seal (Black)	-	(100180)
18	PTFE Top Seal (White)	-	(100181)
19	Bearing Sleeve (B)	(177497)	177498
20	Bearing Washer (Black)	(104181)	(104181)
21	Wear Washer (White)	(104184)	(104696)
22	Bearing Nipple	(104982)	177503
23	Friction Collar, STD (A)	104906	104906

(A) STD friction collars 104906 include Quantity 1 per kit.
(B) Two Collars included with Bearing Sleeve