



Note: Part numbers enclosed in brackets ( ) are not available individually, but may be sold in assemblies or kits.

30H/30WH/30PWH/30FH/30FWH

Ref.	Part Description	30H 30WH	30PWH	30FH 30FWH
<b>UPPER ASSEMBLY</b>				
1	Fulcrum Kit	<b>177417</b>	<b>177417</b>	<b>177417</b>
2	Fulcrum Pin	(100271)	(100271)	(100271)
3	Arm Hood	(100968)	(100968)	(100968)
6	Arm Washer	(100270)	(100270)	(100270)
4	Arm/Spring Assembly	<b>177529</b>	<b>177530</b>	<b>177529</b>
5	Arm Spring	(231061)	(100358)	(231061)

**NOZZLES (Specify nozzle size when ordering)**

7	Drive Nozzles			
-	Straight Bore	<b>105842xx</b>	<b>105842xx</b>	<b>105842xx</b>
-	Straight Bore w/Vane	<b>106131xx</b>	<b>106131xx</b>	—
	Vane (E Models Not Pictured)	<b>105816</b>	<b>105816</b>	—
8	Spreader Nozzles			
-	Spreader 7 Degree	<b>100225xx</b>	—	—
-	Spreader 20 Degree	<b>100226xx</b>	—	<b>100226xx</b>
9	Spreader Plug	<b>100255</b>	—	<b>100255</b>



**BEARING ASSEMBLY**

11	Bearing Assembly	<b>180712</b>	<b>177425</b>	<b>177425</b>
12	Top Seal Washer (W=Wht/G=Grn) G (103709)	W (100313)	W (100313)	W (100313)
13	Metal Top Seal Washer	(100312)	(100312)	(100312)
14	Bearing Spring	(106237)	(106237)	(106237)
15	Bearing Sleeve	<b>177511</b>	<b>177511</b>	<b>177511</b>
16	Bearing Washer (Black)	(100726)	(100726)	(100726)
17	Wear Washer (White)	(104762)	(104762)	(104762)
18	Seal Washer (Black)	(100726)	(100726)	(100726)
19	Bearing Nipple	<b>177517</b>	<b>177517</b>	<b>177517</b>



10	Bearing Washer Kit	<b>180703</b>	<b>177448</b>	<b>177448</b>
12	Top Seal Washer (W=Wht/G=Grn) G (103709)	W (100313)	W (100313)	W (100313)
13	Metal Top Seal Washer	(100312)	(100312)	(100312)
14	Bearing Spring	(106237)	(106237)	(106237)
16	Bearing Washer (Black)	(100726)	(100726)	(100726)
17	Wear Washer (White)	(104762)	(104762)	(104762)
18	Seal Washer (Black)	(100726)	(100726)	(100726)

Note: Part numbers enclosed in brackets ( ) are not available individually, but may be sold in assemblies or kits.