



**Ref. Part Description 70CH / 70CHM**

**UPPER ASSEMBLY**

1	Fulcrum Kit	<b>177420</b>
2	Fulcrum Pin	(100348)
3	Arm Washer (2)	(100163)
4	Arm Spring Assembly	<b>177532</b>
5	Arm Spring	(100369)

**NOZZLES (Specify nozzle size when ordering)**

6	Straight Bore Spreader Nozzle	<b>100382xx</b>
7	Plug	<b>100417</b>
-	Bushing (Required for 20 Degree)	<b>100418</b>
-	20 Degree Spreader Nozzle	<b>100226-08</b>
-	Body Vane (Not Shown)	<b>100695</b>

**BEARING ASSEMBLY**

8	Bearing Assy (Female H Style)(NPT Assy)	<b>177514</b>
9	Bearing Hood	(103119)
10	Bearing Spring	(100620)
11	Metal Top Seal Washer	(100312)
12	Top Seal Washer (White)	(103115)
13	Bearing Sleeve (FNPT)	<b>(A) 177500</b>
14	Bearing Washer (Black)	(104038)
15	Wear Washer (Orange)	(104037)
16	Bearing Washer (Black)	(104038)
17	Bearing Nipple	<b>177518</b>
19	Bearing Washer Kit	<b>177426</b>

8	Bearing Assy (Male H Style)(NPT Assy)	<b>177512</b>
9	Bearing Hood	(103119)
10	Bearing Spring	(100620)
11	Metal Top Seal Washer	(100312)
12	Top Seal Washer (White)	(103115)
13	Bearing Sleeve (MNPT)	(108725)
14	Bearing Washer (Black)	(104038)
15	Wear Washer (Orange)	(104037)
16	Bearing Washer (Black)	(104038)
17	Bearing Nipple	<b>177518</b>
19	Bearing Washer Kit	<b>177426</b>

(A) Kit includes Trip Collar for 65 Sprinkler, not required for 70CH.

Note: Part numbers enclosed in brackets ( ) are not available individually, but may be sold in assemblies or kits.