



Ref.	Part Description	85EHD	85EHD-LA	85EHD-BSP
UPPER ASSEMBLY				
28	Fulcrum Kit	177421	177421	177421
1	Fulcrum Pin	(100430)	(100430)	(100430)
2	Arm Hood	(108556)	(108556)	(108556)
3	Arm Washer (2)	(100432)	(100432)	(100432)
4	Arm Spring Assembly	177470	(111805)	177470
5	Arm Spring	(100431)	(100431)	(100431)
TRIP MECHANISM				
6	Trip Arm, Upper	111130	111130	111130
	Trip Arm, Lower	111129	111129	111129
9	Trip Hardware Kit	179992	179992	179992
7	Trip Spring	(112858)	(112858)	(112858)
10	E-Ring	(231078)	(231078)	(231078)
30	Spacer Washer	(231077)	(231077)	(231077)
31	Trip Hood (2)	(111812)	(111812)	(111812)
11	Trip Shaft	(108321)	(108321)	(108321)
NOZZLES (Specify nozzle size when ordering)				
12	Range Nozzle	103043xx	103043xx	103043xx
13	Body Vane	101275	101275	101275
14	20 Deg. Spreader Nozzle	100226-14	100226-14	—
-	Nozzle Plug	100255	100255	—
BEARING KIT				
15	Bearing Washer Kit	177474	177474	177474
16	Seal Washer, Upper	(104638)	(104638)	(104638)
17	Bearing Hood	(113098)	(113098)	(113098)
18	Bearing Spring	(100449)	(100449)	(100449)
19	Wear Washer, Top (Black)	(113309)	(113309)	(113309)
21	Bearing Washer (Black)	(113099)	(113099)	(113099)
22	Wear Washer (Orange)	(104639)	(104639)	(104639)
23	Bearing Washer, Seal	(113100)	(113100)	(113100)
20	Bearing Sleeve	177515	177515	(177467)
24	Bearing Nipple	177506	177506	177506
COLLAR KIT				
29	Collar Kit	179993	179993	179993
25	Friction Collars (Top)	(107959)	(107959)	(107959)
26	Screw (2)	(111126)	(111126)	(111126)
27	Friction Collars (Bottom)	(107960)	(107960)	(107960)

Note: Part numbers enclosed in brackets () are not available individually, but may be sold in assemblies or kits.