



Ref. Part Description	L20VH	M20VH-PM
UPPER ASSEMBLY		
3 Fulcrum Kit	177415	177415
1 Fulcrum Pin	(100793)	(100793)
2 Arm Hood	(100775)	(100775)
7 Arm Spring Assembly	177523	177523
5 Arm Spring	(100172)	(100172)
4 Wedge	(111188)	(111188)
6 Wedge Pin	(116046)	(116046)
NOZZLES (Specify nozzle size when ordering)		
8 Straight Bore	105780xx	105780xx
BEARING ASSEMBLY		
16 Bearing Assembly (Complete)	177535	177423
9 Top Seal Washer (Black)	(104183)	(104183)
10 Metal Top Seal Washer	(100280)	(100280)
11 Bearing Spring	(105431)	(105431)
12 Bearing Sleeve (Brass)	177510	-
12 Bearing Sleeve (Plastic)	-	(177509)
13 Bearing Washer (2) (Black)	(104181)	(104181)
14 Wear Washer (White)	(104696)	(104696)
15 Bearing Nipple	177516	177516
17 Bearing Washer Kit	177536	177536
9 Top Seal Washer (Black)	(104183)	(104183)
10 Metal Top Seal Washer	(100280)	(100280)
11 Bearing Spring	(105431)	(105431)
13 Bearing Washer (2) (Black)	(104181)	(104181)
14 Wear Washer (White)	(104696)	(104696)

Note: Part numbers enclosed in brackets () are not available individually, but may be sold in assemblies or kits.