



Ref.	Part Description	L36AH	
		L36H	Discontinued
<b>UPPER ASSEMBLY</b>			
1	Body Cap	(114474)	(114474)
2	Arm Spring Assy	(177527)	(177449)
3	Arm	(115063)	(112236)
4	Arm Spring	(114472)	(114472)
5	Arm Washer	(100270)	(100270)
6	Fulcrum Pin	(110726)	(110726)
7	Body	(114319)	(114319)
<b>NOZZLES (Specify nozzle size when ordering)</b>			
8	Straight Bore, Quick Fit	<b>107881xx</b>	<b>107881xx</b>
<b>BEARING ASSEMBLY</b>			
9	Bearing Assembly	<b>177424</b>	<b>177425</b>
10	Top Seal Washer	(Gr) (103709) (W) (100313)	(100313)
11	Metal Top Seal Washer	(100312)	(100312)
12	Bearing Spring	(106237)	(106237)
13	Bearing Sleeve	<b>177511</b>	<b>177511</b>
14	Bearing Washer	(B) (100726) (B) (100726)	(100726)
15	Wear Washer	(O) (103058) (O) (104762)	(104762)
16	Seal or Brg Washer	(G) (102345) (B) (100726)	(100726)
17	Bearing Nipple	<b>177517</b>	<b>177517</b>
18	Bearing Washer Kit	<b>177447</b>	<b>177448</b>
10	Top Seal Washer	(Gr) (103709) (W) (100313)	(100313)
11	Metal Top Seal Washer	(100312)	(100312)
12	Bearing Spring	(106237)	(106237)
14	Bearing Washer	(B) (100726) (B) (100726)	(100726)
15	Wear Washer	(O) (103058) (O) (104762)	(104762)
16	Seal or Brg Washer	(G) (102345) (B) (100726)	(100726)

Bearing washer color code: W = White, Gr = Dark Green, B = Black, O = Orange, G = Grey  
 \*NOTE: Old style L36 has a plastic bearing nipple, while new style L36 has a brass bearing nipple.

Note: Part numbers enclosed in brackets ( ) are not available individually, but may be sold in assemblies or kits.