



1. FOR ALL XFS-CV AND POLY CONNECTIONS INSTALL XFF AND/OR XFD FITTINGS.
2. SEE XFS-CV TREE RING DOUBLE OR TRIPLE FOR DETAIL OF EACH SET OF RINGS.
3. FOR TOTAL SYSTEM FLOW LESS THAN 5 GPM USE BLANK DRIPLINE TO CONNECT TREE RINGS, REMOTE CONTROL, VALVE, AND MANUAL FLUSH VALVE.

XFS-CV Sub-Surface On-Surface Dripline Multiple Tree Ring Layout End To End