

11000 SERIES ROTORS

Installation Guide



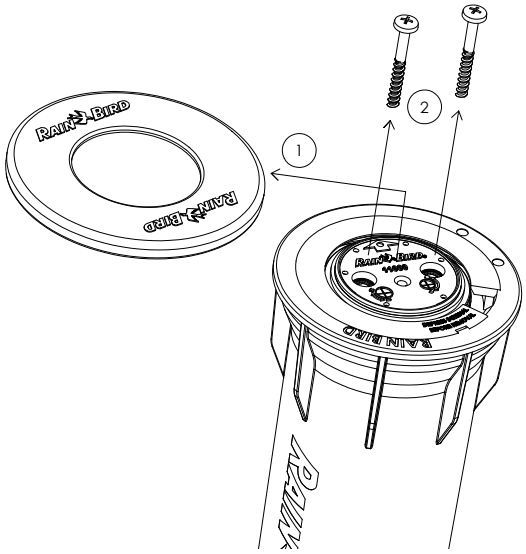

1. Remove the rubber covers.
2. Remove the screws.

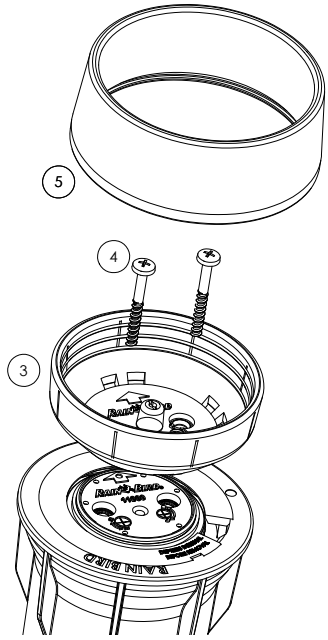

3. Place the inner cup on the nozzle housing.
4. Reinstall the screws.
5. Place the outer ring around the rotor case top.