


## Installation Instructions for RWS-S – Shrub Root Watering System

### For new or relocated trees:

#### Installation Steps:


1. Install Shrub RWS units, per drawing. The number of RWS-S units will vary depending on the size, type and watering requirements of the shrub (1- 2 RWS-S units are recommended per shrub). For planting a row of shrubs, plant per drawing.
2. Place units vertically with top even with ground surface. The RWS-S requires a 10" (25.4 cm) hole depth.
3. For the basic RWS-S, add irrigation components as desired.
4. For models with the pre-installed hardware, connect the 1/2" barb fitting to the lateral line.
5. Fill area surrounding unit with soil.
6. Follow planting guidelines for specific shrub species, and for local conditions.

#### Single Shrub

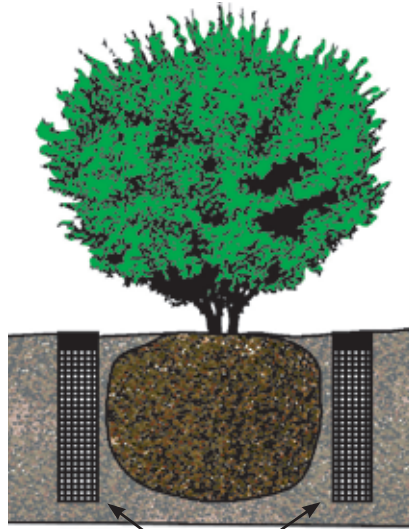

Space units evenly as shown.

#### Row of Shrubs

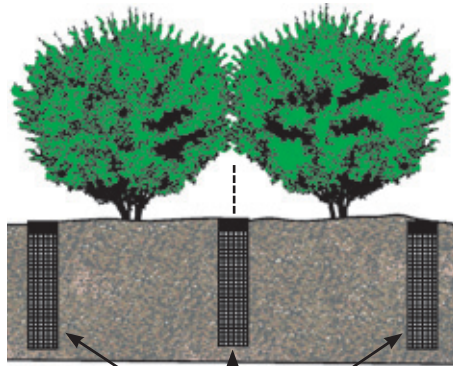

Position units evenly spaced as shown.

### For existing shrubs:

#### Installation Steps:

1. Core out holes to 10" depth.
2. Position units evenly spaced, per drawing. The number of RWS-S units will vary depending on the size, type and watering requirements of the shrub (1- 2 RWS-S units are recommended per shrub). For planting a row of shrubs, plant per drawing.
3. Place units vertically with top even with ground surface. The RWS-S requires a 10" (25.4 cm) hole depth.
4. For the basic RWS-S, add irrigation components as desired.
5. For models with the pre-installed hardware, connect the 1/2" barb fitting to the lateral line.
6. Fill area surrounding unit with soil.
7. Follow planting guidelines for specific shrub species, and for local conditions.

#### Single Shrub



Install product with top even with ground surface