


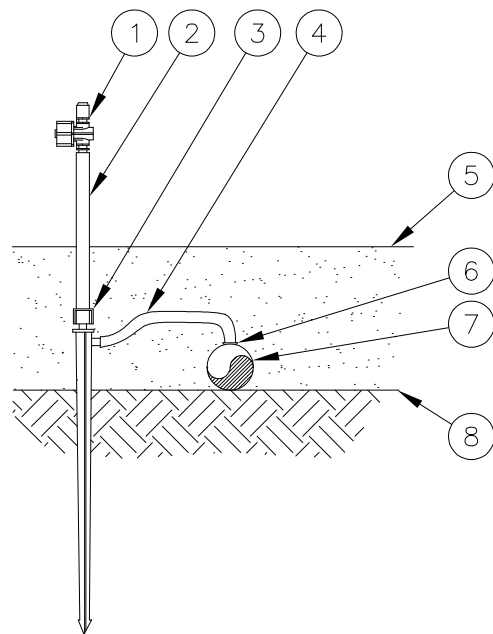


- ① MICRO-SPRAY WITH 1032 THREADED INLET:
RAIN BIRD XERI-SPRAY
- ② 12" POLYFLEX RISER:
RAIN BIRD PFR-12
- ③ THREADED RISER STAKE:
RAIN BIRD RS-025T
- ④ 1/4" DISTRIBUTION TUBING:
RAIN BIRD XQ TUBING
(LENGTH AS REQUIRED)
- ⑤ TOP OF MULCH
- ⑥ 1/4" BARB TRANSFER CONNECTOR:
RAIN BIRD XBF1CONN
- ⑦ 1/2" POLYETHYLENE TUBING:
RAIN BIRD XF SERIES TUBING OR
RAIN BIRD XT-700 XERI-TUBE OR
RAIN BIRD XBS BLACK STRIPE TUBING
- ⑧ FINISH GRADE

NOTES:

1. USE RAIN BIRD XERIMAN TOOL XM-TOOL TO INSERT TRANSFER TEE DIRECTLY INTO 1/2" POLYETHYLENE TUBING.
2. RAIN BIRD XERI-SPRAY AVAILABLE IN THE FOLLOWING MODELS:
XS-090 - QUARTER CIRCLE - SPRAY - 31 GPH MAX
XS-180 - HALF CIRCLE - SPRAY - 31 GPH MAX
XS-360 - FULL CIRCLE - STREAM SPRAY - 31 GPH MAX
X360 ADJMST - FULL CIRCLE - MIST - 31 GPH MAX

XERI-SPRAY 1032 THREADED ON POLYFLEX RISER AND STAKE INTO 1/2" POLYETHYLENE

1-21-10



N.T.S.

TUBING WITH 1/4" TRANSFER CONNECTOR AND TUBING - OPTION 3