



- ① LOW VOLUME SPRAY NOZZLE:
RAIN BIRD 3QTR SQ NOZZLE
- ② POLYFLEX RISER ADAPTER:
RAIN BIRD SQ ADP
- ③ POLYFLEX RISER AND STAKE ASSEMBLY:
RAIN BIRD PFR-RS
- ④ ¼" DISTRIBUTION TUBING:
RAIN BIRD XQ TUBING
(LENGTH AS REQUIRED)
- ⑤ ¼" BARB TRANSFER TEE:
RAIN BIRD XBF3TEE
- ⑥ ½" POLYETHYLENE TUBING:
RAIN BIRD XF SERIES TUBING OR
RAIN BIRD XT-700 XERI-TUBE OR
RAIN BIRD XBS BLACK STRIPE TUBING
- ⑦ TOP OF MULCH
- ⑧ FINISH GRADE
- ⑨ PLANT ROOT BALL

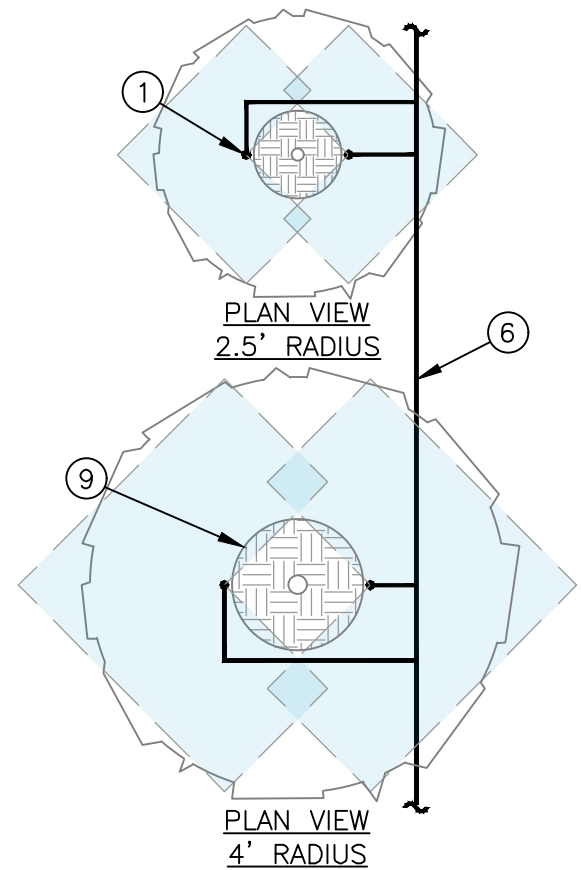

NOTES:

- 1. INSTALL LOW VOLUME SPRAY NOZZLES AT THE ROOTBALL EDGE SPRAYING OUTWARD ON OPPOSITE SIDES OF TRUNK TO PROVIDE COVERAGE UNDER PLANT CANOPY.
- 2. THE NOZZLE RADIUS CAN BE ADJUSTED FROM 2.5' TO 4' BY TURNING THE NOZZLE.
- 3. USE RAIN BIRD XERIMAN TOOL XM-TOOL TO INSERT TRANSFER TEE DIRECTLY INTO ½" POLYETHYLENE TUBING.

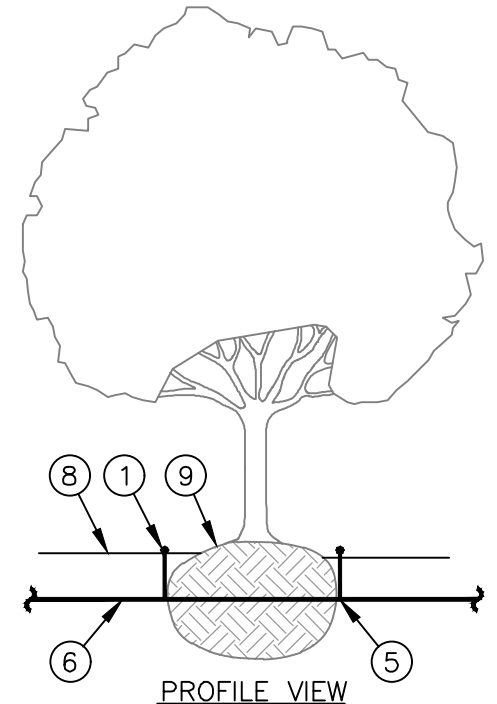

**3QTR SQ NOZZLE WITH ADAPTER ON POLYFLEX RISER
STAKE FROM BARBED TRANSFER TEE
INTO 1/2" POLYETHYLENE TUBING
OPTION 5**

D

N.T.S.