


- (1) FLUSH POINT (TYPICAL)
 SEE RAIN BIRD DETAIL "XFS-CV FLUSH POINT"
- (2)QF EXHAUST HEADER
- (3) PRE-INSTALLED BARB FITTING
- (4) PERIMETER OF AREA
- 5) XF SERIES TIE-DOWN STAKES (TDS-050)
 REFER TO RAIN BIRD DRIPLINE DESIGN GUIDE
 FOR PROPER SPACING
- 6 IRRIGATION CONTROL VALVE:
 RAIN BIRD XCZ DRIP CONTROL ZONE KIT
 INSTALLED IN VALVE BOX
- 7) PVC DRIP MANIFOLD FROM RAIN BIRD CONTROL ZONE VALVE KIT (SIZED TO MEET LATERAL FLOW DEMAND)
- (8) QF SUPPLY HEADER
- 9 SUB-SURFACE/ON-SURFACE DRIPLINE: RAIN BIRD XFS-CV SERIES DRIPLINE (TYPICAL) NON-POTABLE: XFS-CVP DRIPLINE
- (10) PERIMETER DRIPLINE PIPE TO BE INSTALLED 2"-4" FROM PERIMETER OF AREA
- (11) OPERATION INDICATOR
 RAIN BIRD MODEL: OPERIND
- (12) TWIST LOCK FITTING: TLF-MPT
- (13) PVC SCH 40 ELL (TYPICAL)
- (14) TWIST LOCK CAP: TLF-CAP
- (15) PVC SCH 40 BALL VALVE

NOTES:

- 1. FOR ALL QF HEADER CONNECTIONS INSTALL TLF SERIES TWIST LOCK FITTINGS.
- 2. DISTANCE BETWEEN LATERAL ROWS AND EMITTER SPACING TO BE BASED ON SOIL TYPE, PLANT MATERIALS AND CHANGES IN ELEVATION. SEE INSTALLATION SPECIFICATIONS ON RAIN BIRD WEB SITE (WWW.RAINBIRD.COM) FOR SUGGESTED SPACING.
- 3. LENGTH OF LONGEST DRIPLINE LATERAL SHOULD NOT EXCEED THE MAXIMUM SPACING SHOWN IN THE ACCOMPANYING TABLE.

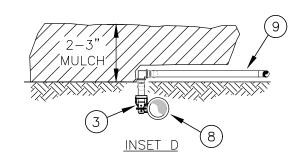

(Feet)				
Inlet Pressure psi	12" Spacing		18" Spacing	
	Nominal Flow (gph)		Nominal Flow (gph)	
	0.6	0.9	0.6	0.9
20	192	136	254	215
30	289	205	402	337
40	350	248	498	416
50	397	281	573	477
60	436	309	637	529

XFS-CV Dripline Maximum Lateral Lengths

XFS-CV SUB-SURFACE/ON-SURFACE DRIPLINE 05-17-2017 END FEED LAYOUT QF HEADER N.T.S.

XFS-CV Sub-Surface On-Surface Dripline End Feed Layout QF Header